

Alpha


Free Flight Glider Balsa Airplane Kit Building Instructions

<http://www.ascendhobbies.com>


Before beginning assembly, please read these instructions thoroughly.

Wingspan: 813mm Length: 610mm Wing Area: 9.75dm²


CG Position: 40mm from the leading edge of the wing.

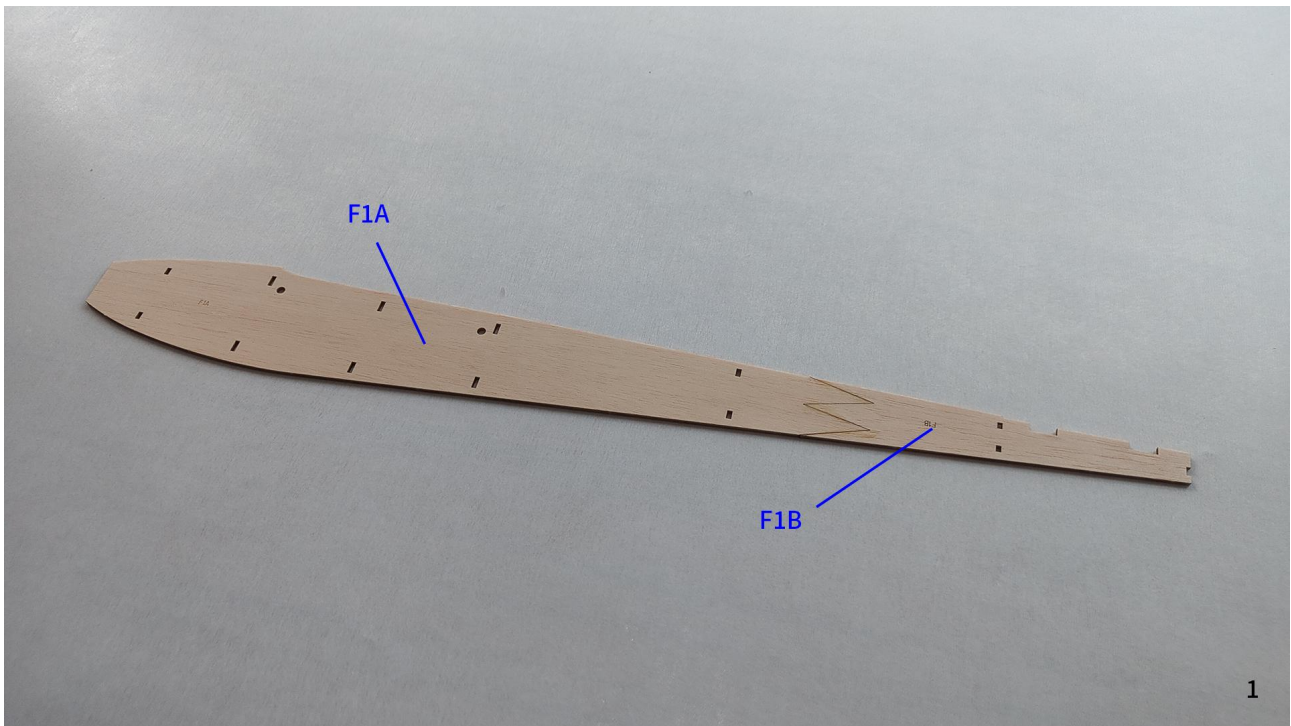


Step 1

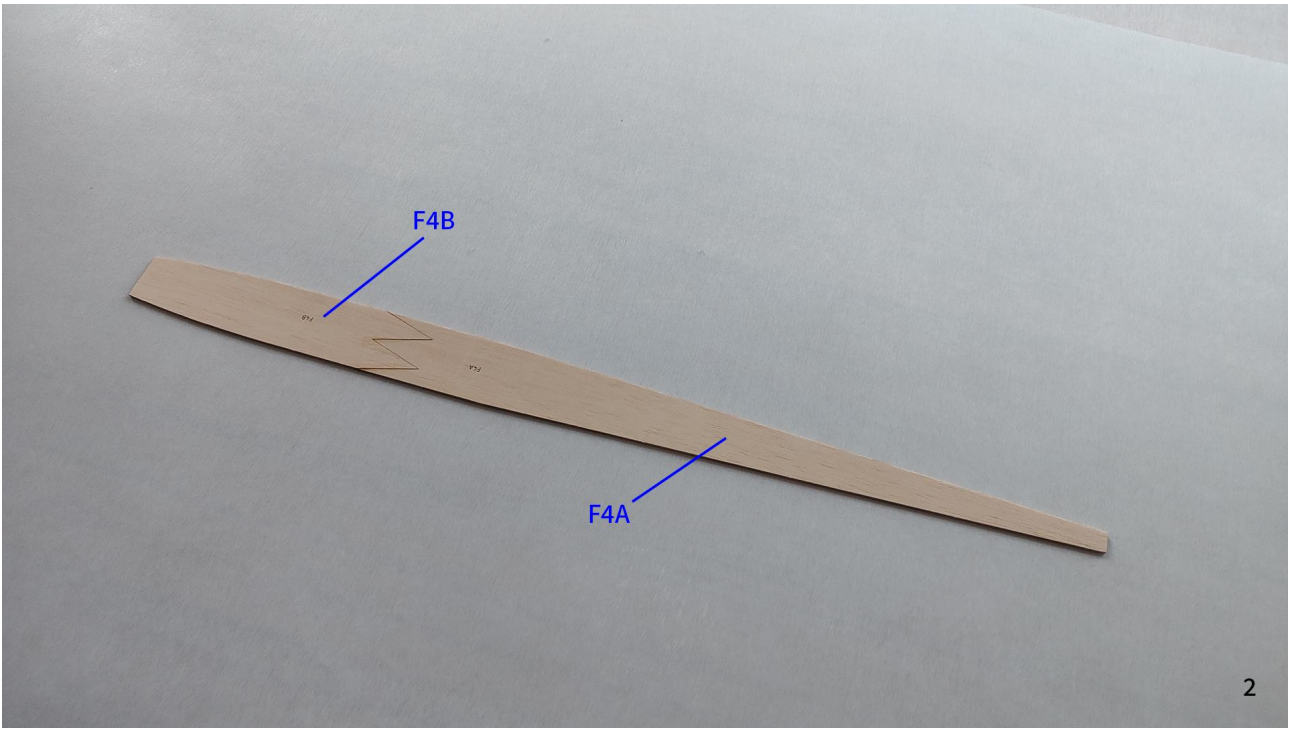


Step 2

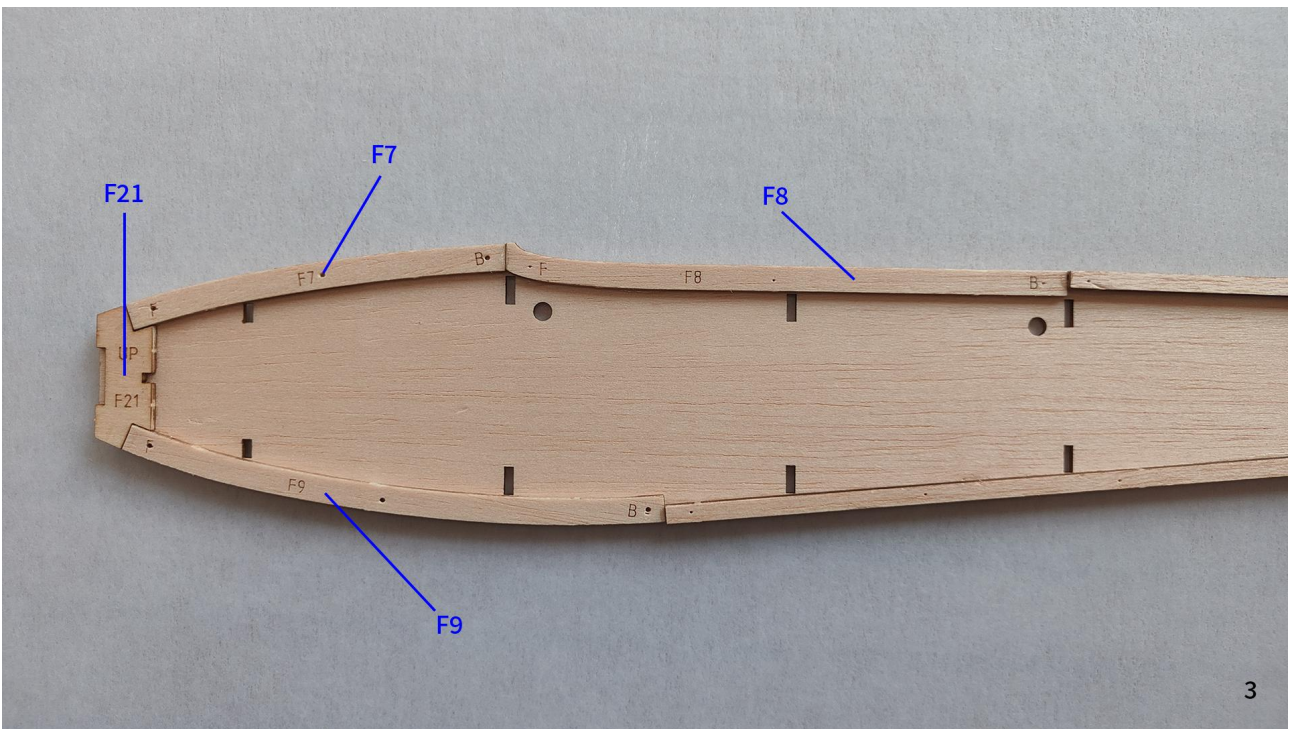


Step 3

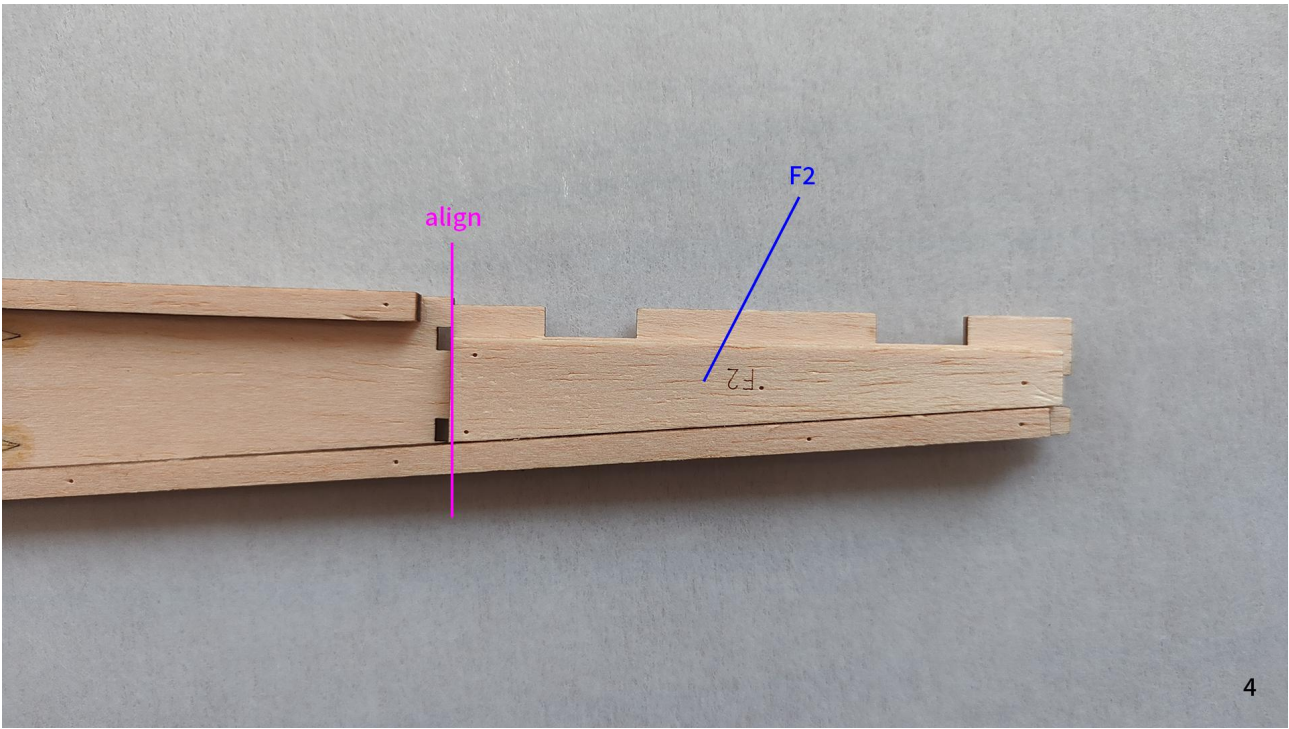


Step 4

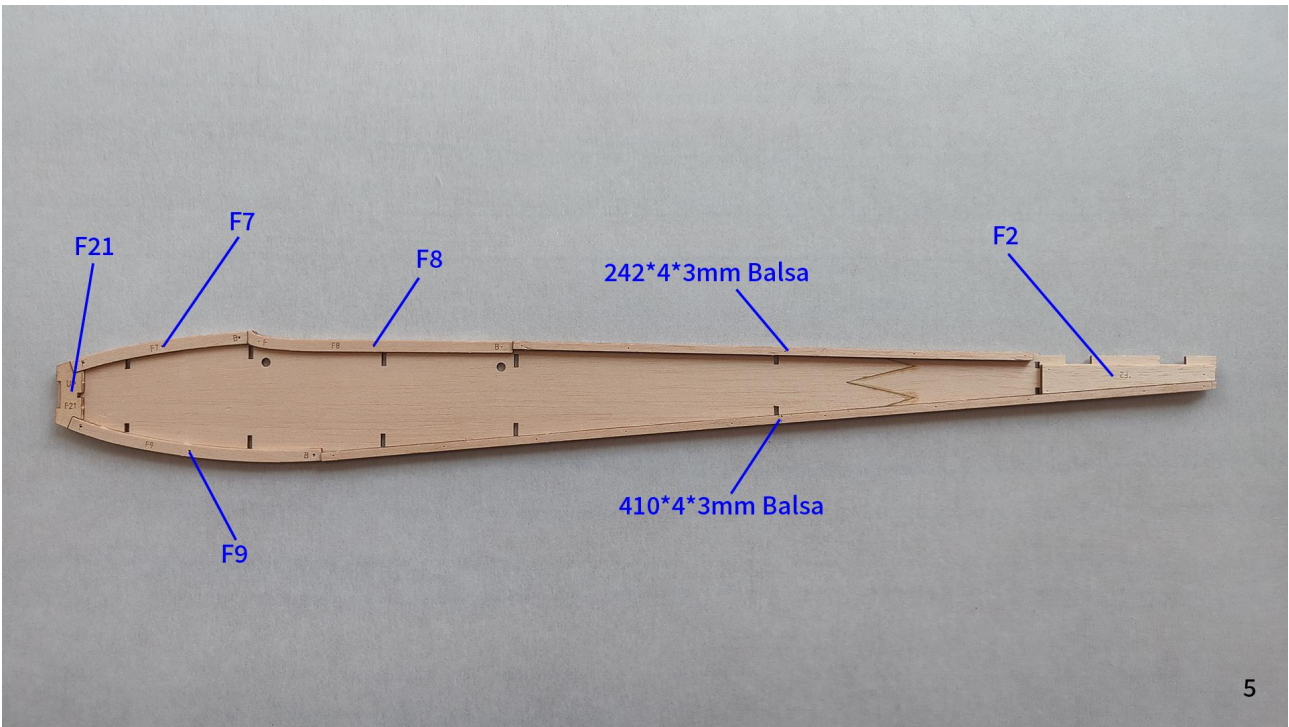


Step 5

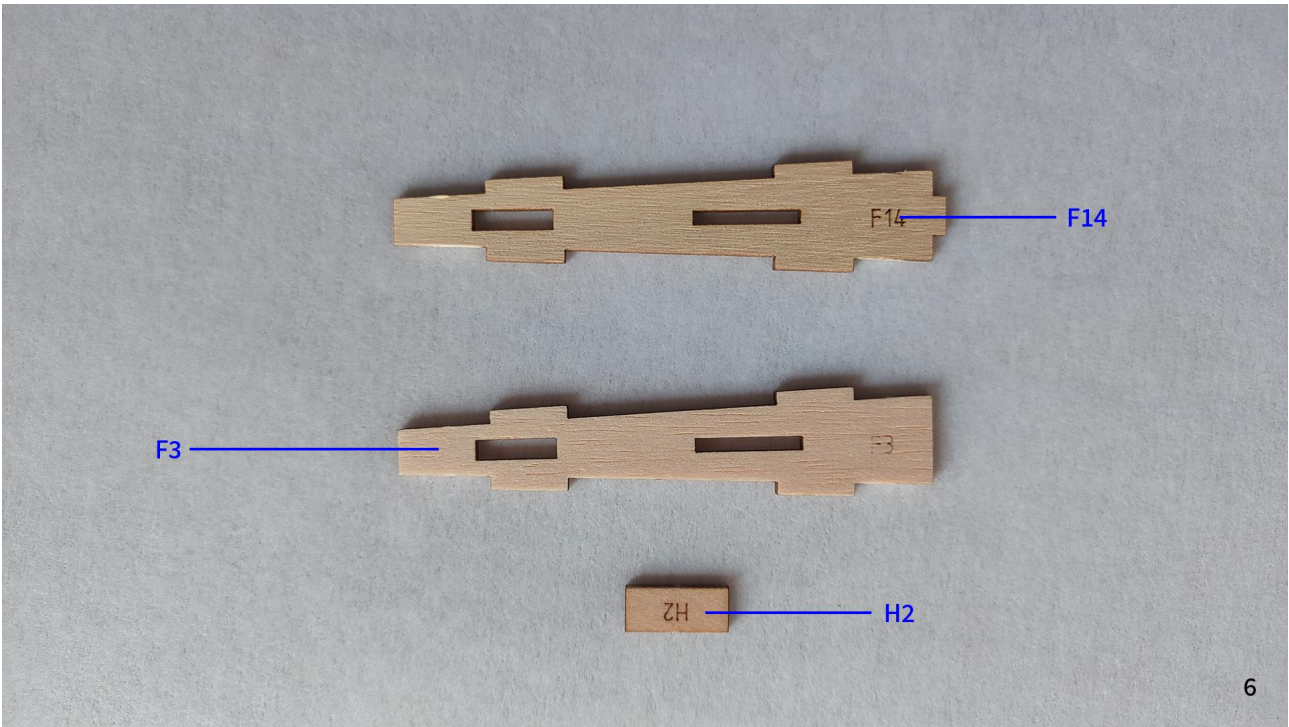


Step 6

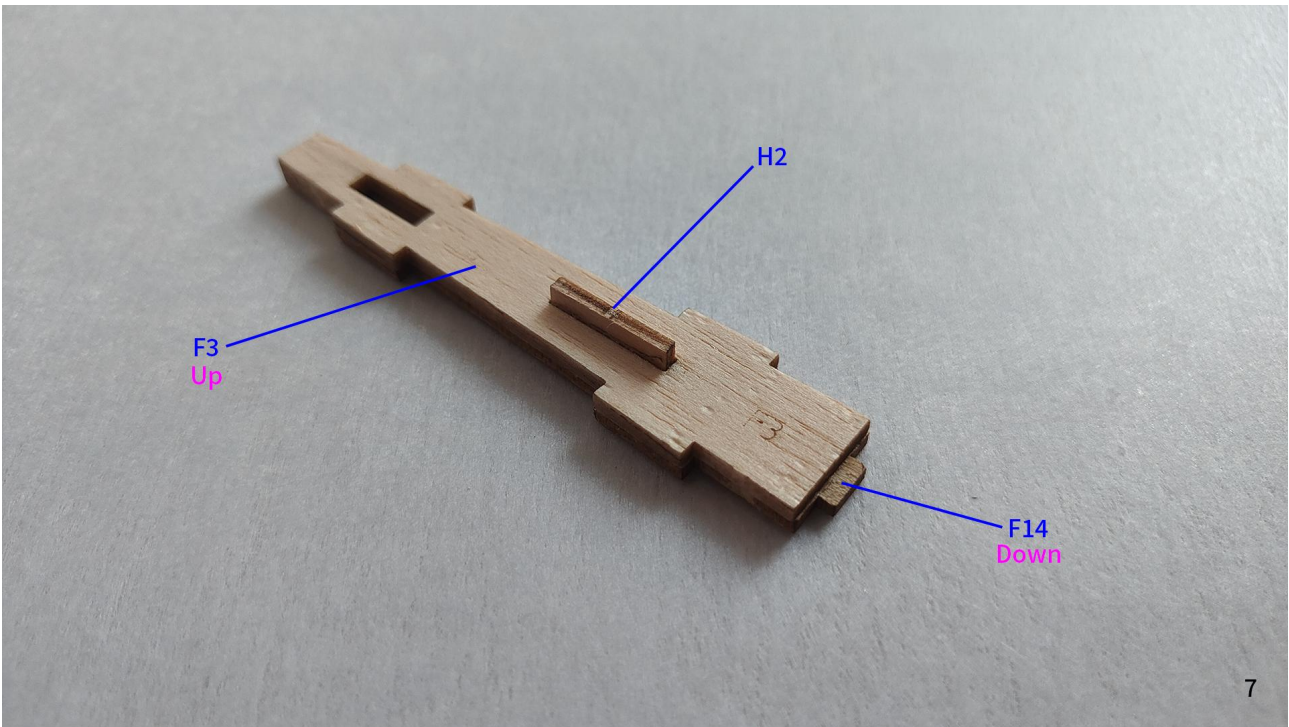


Step 7

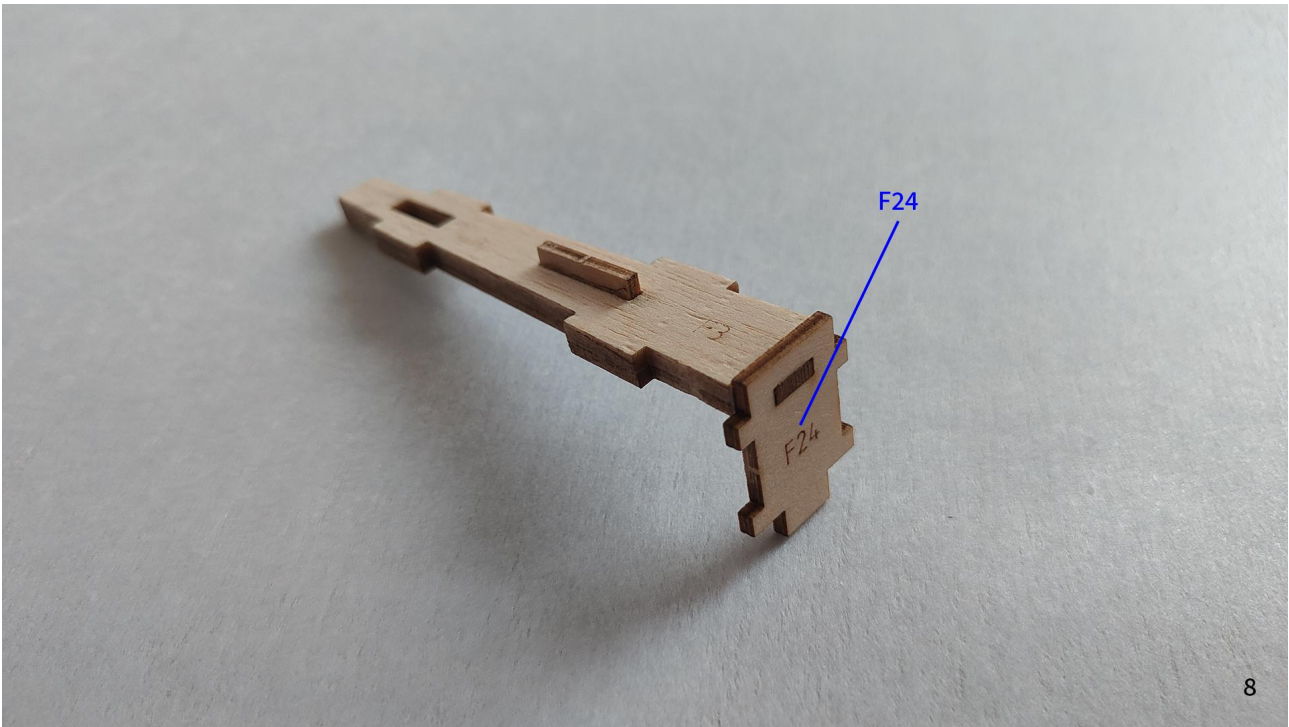


Step 8

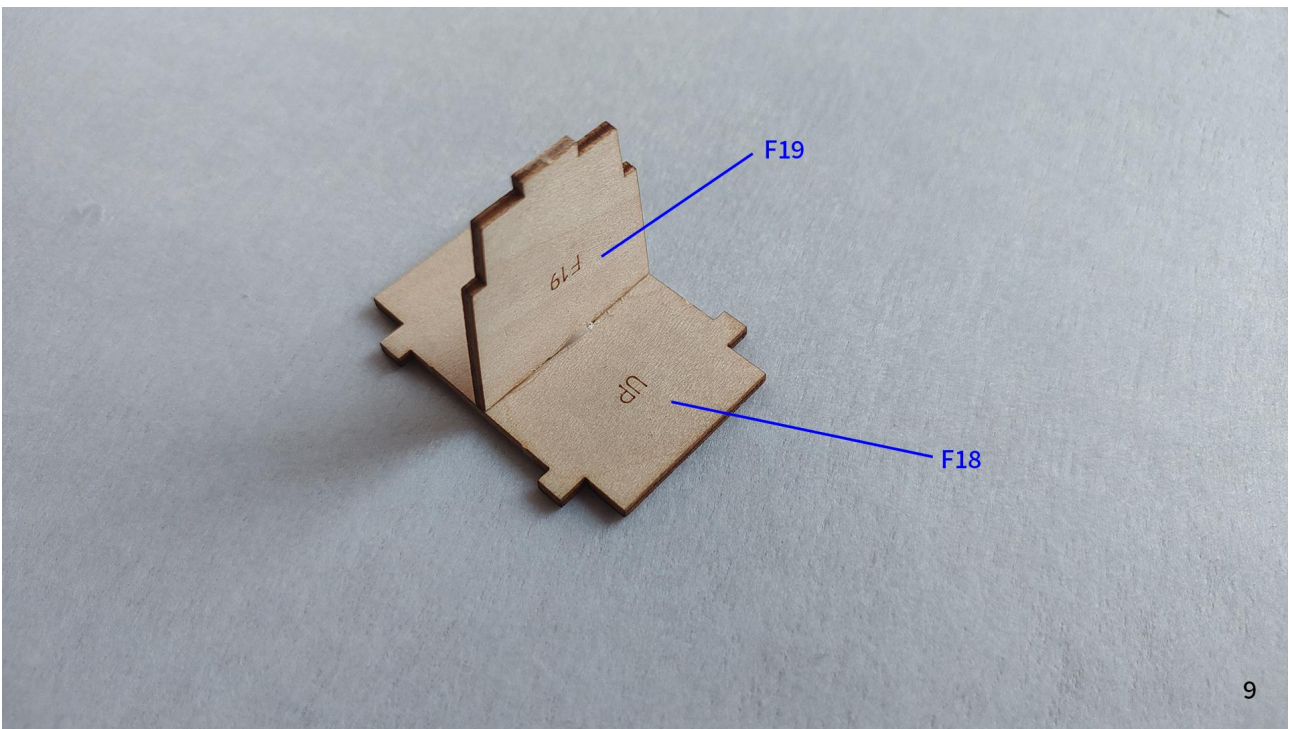


Step 9

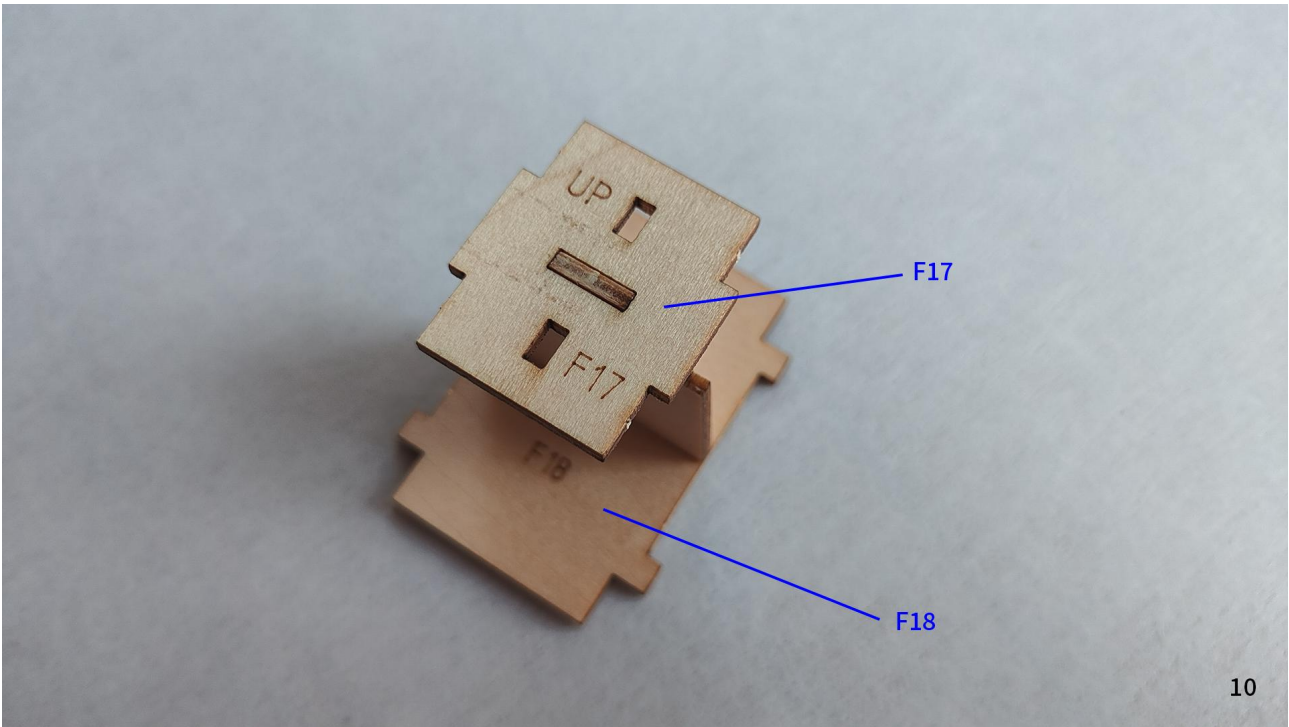

Step 10

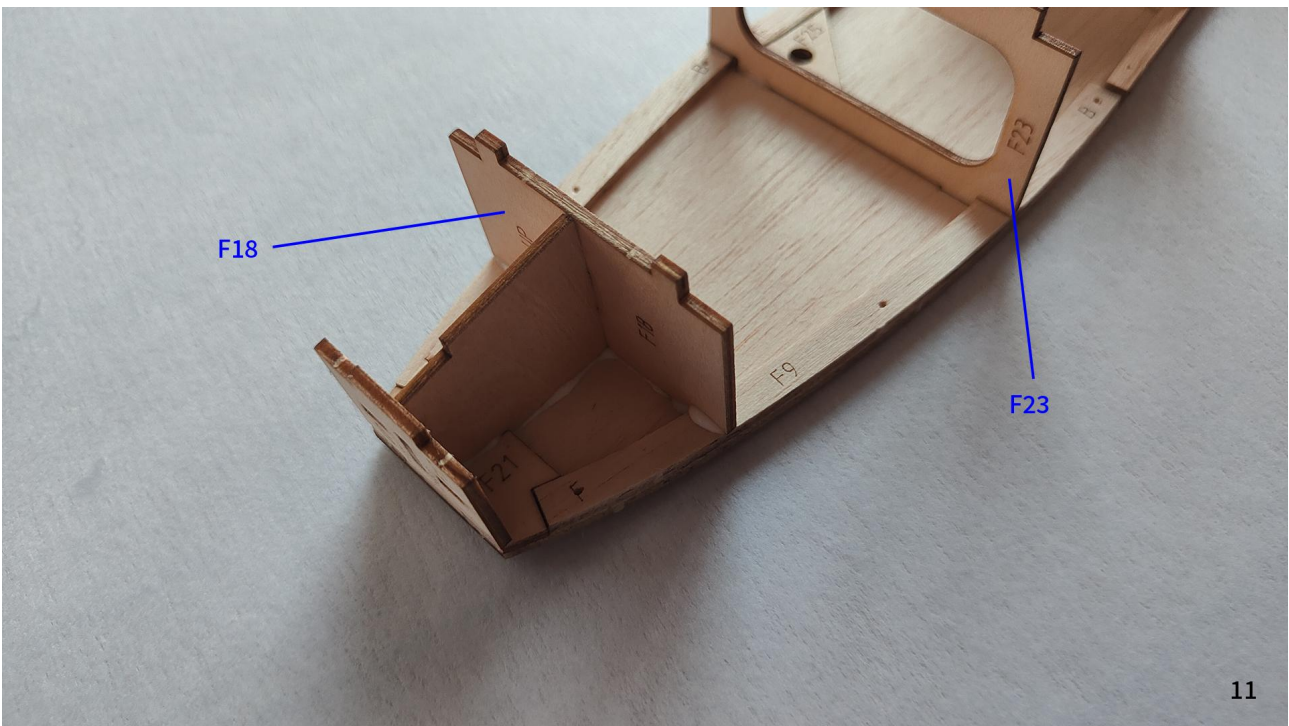


Step 11

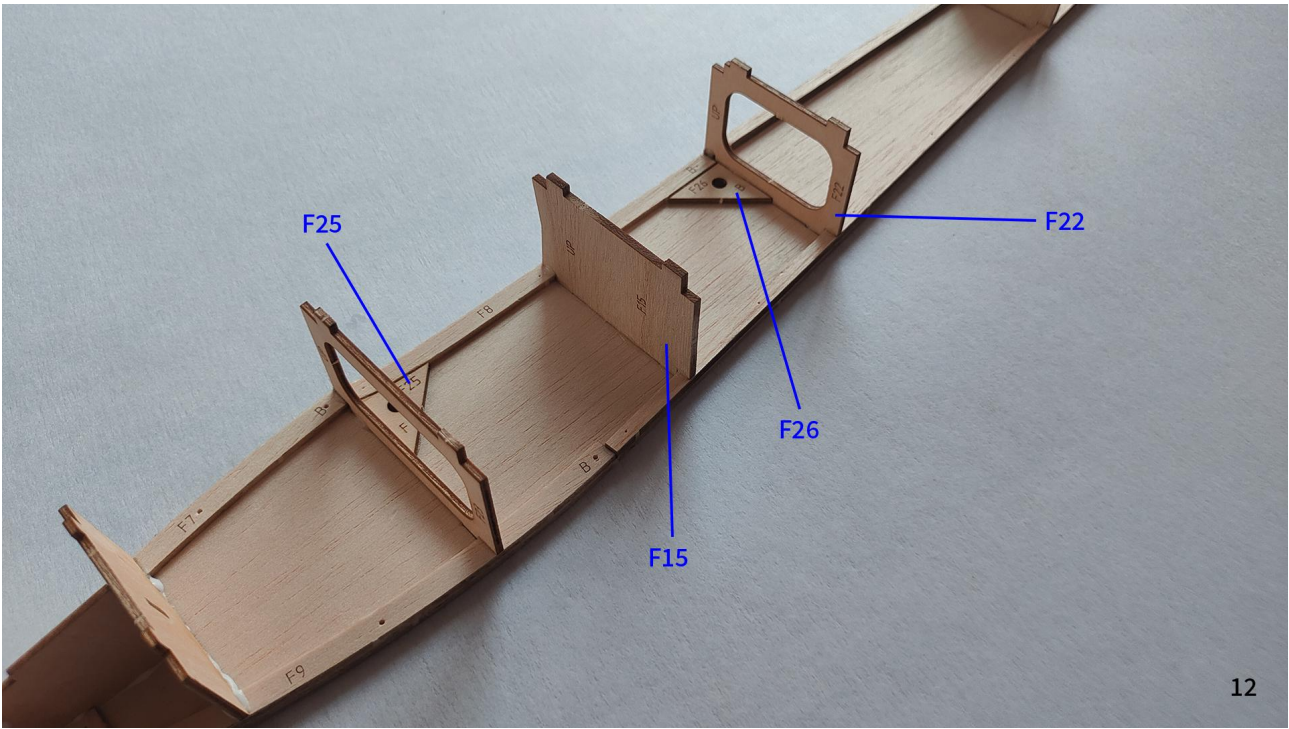


12

Step 12

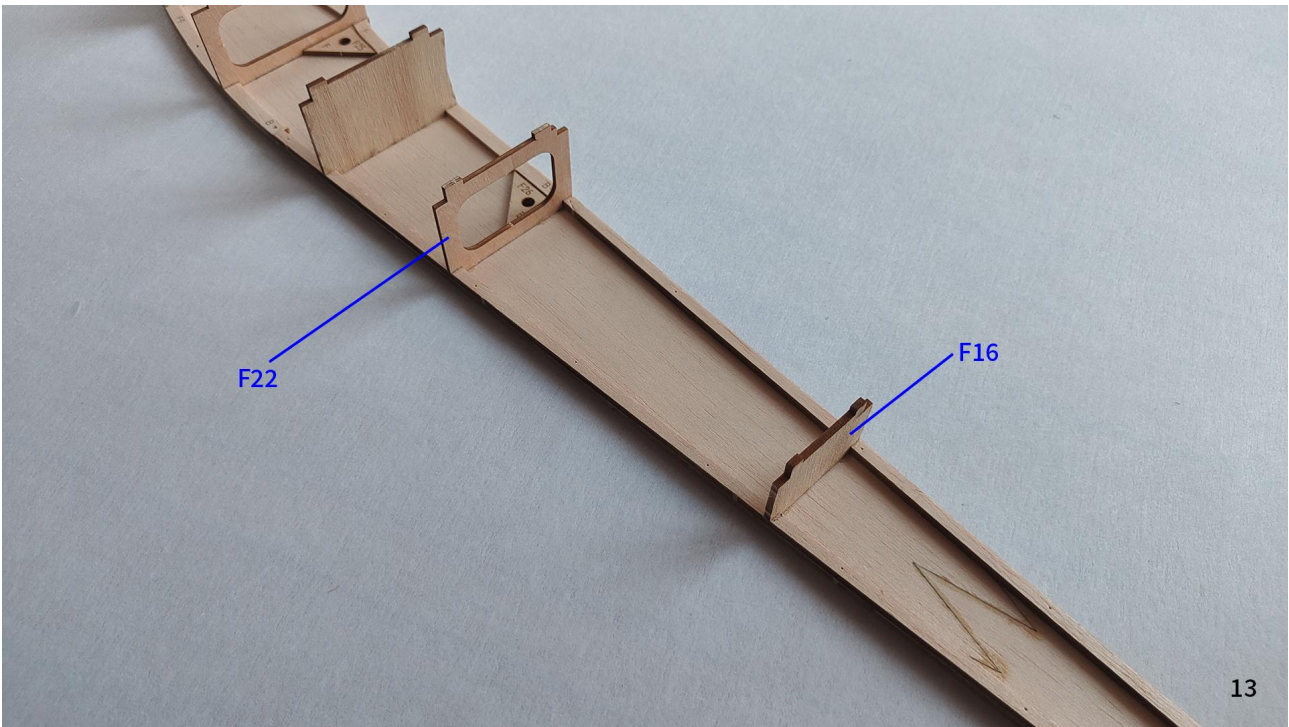


13


Step 13

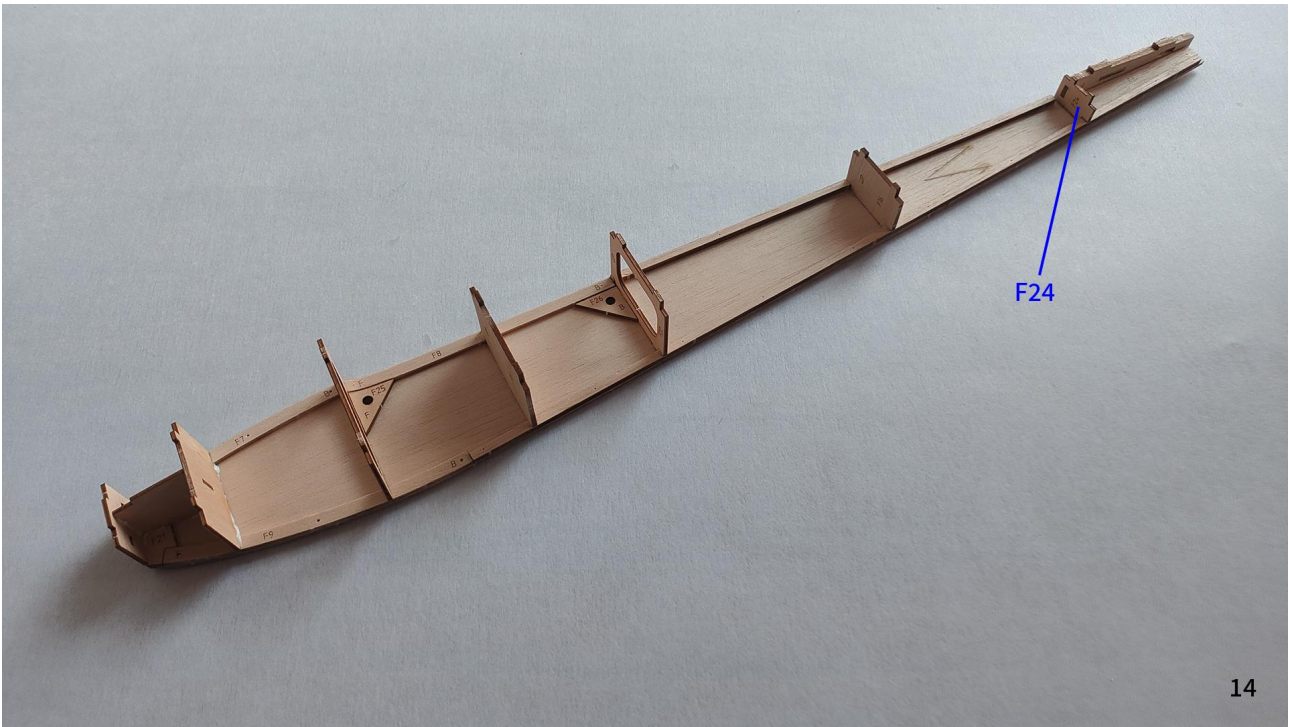


Step 14

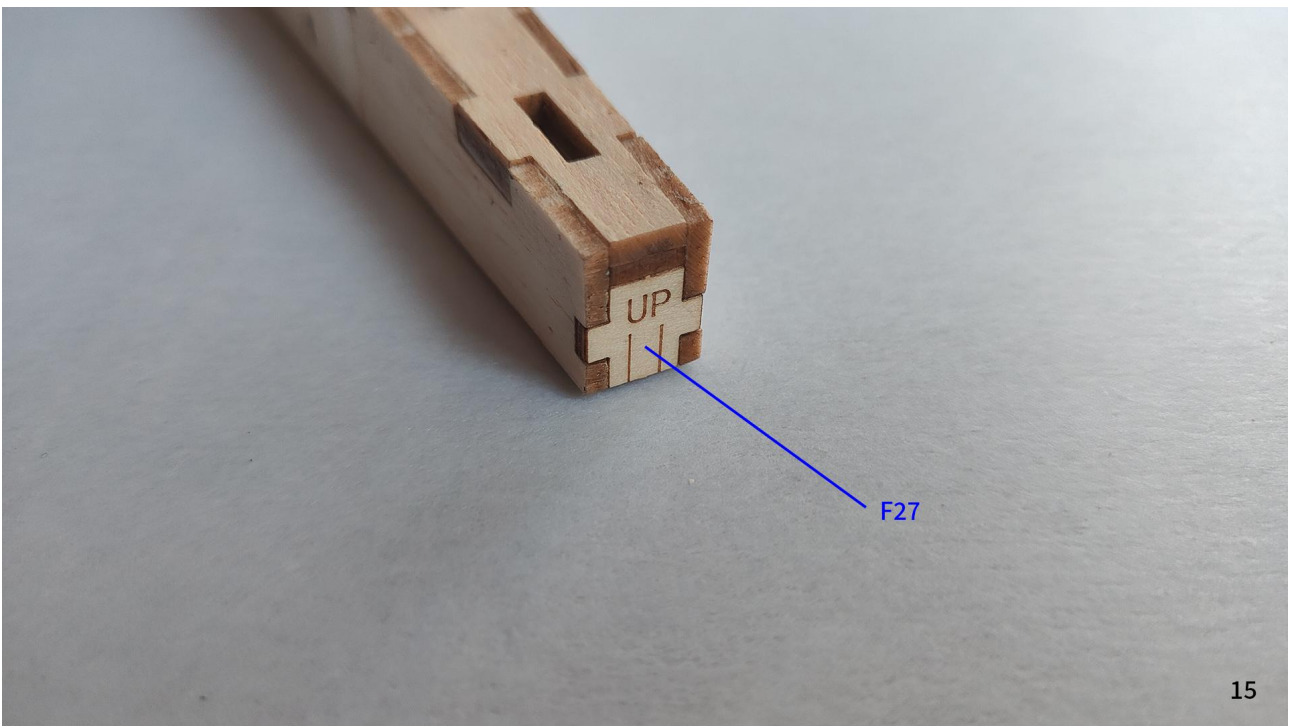


Step 15

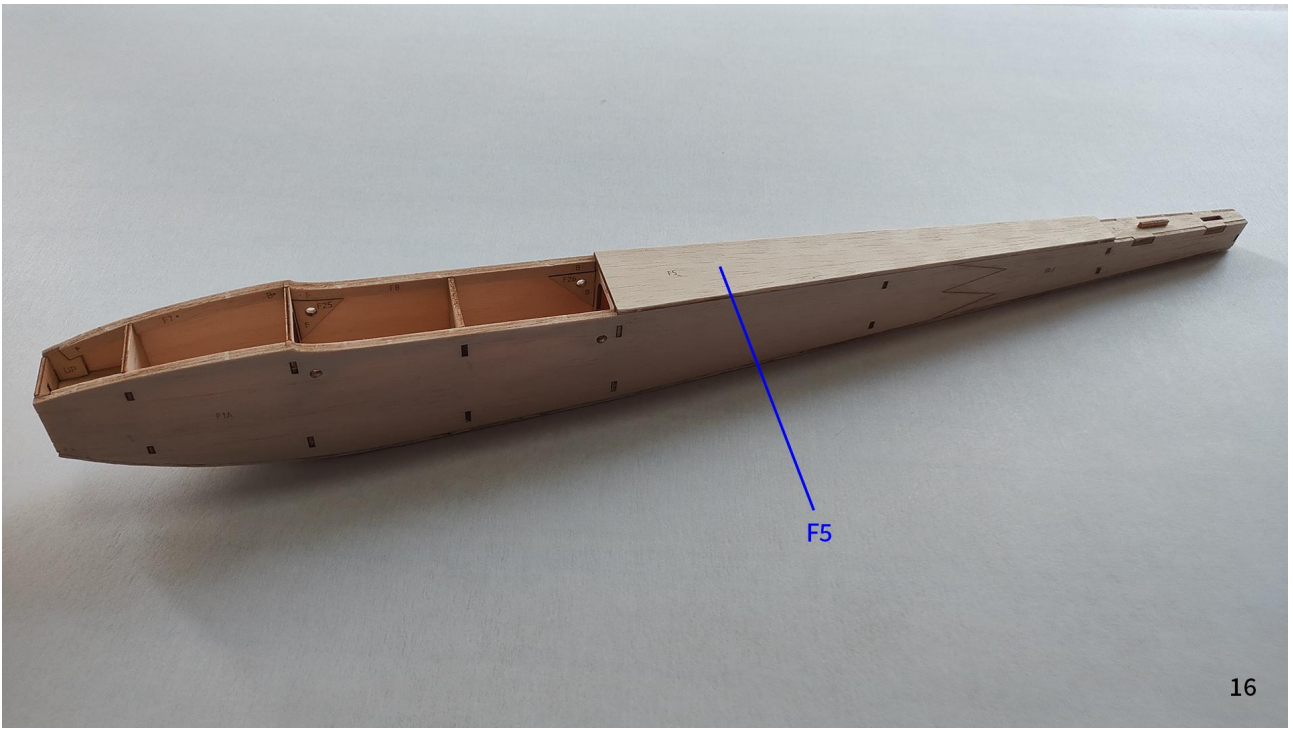


Step 16

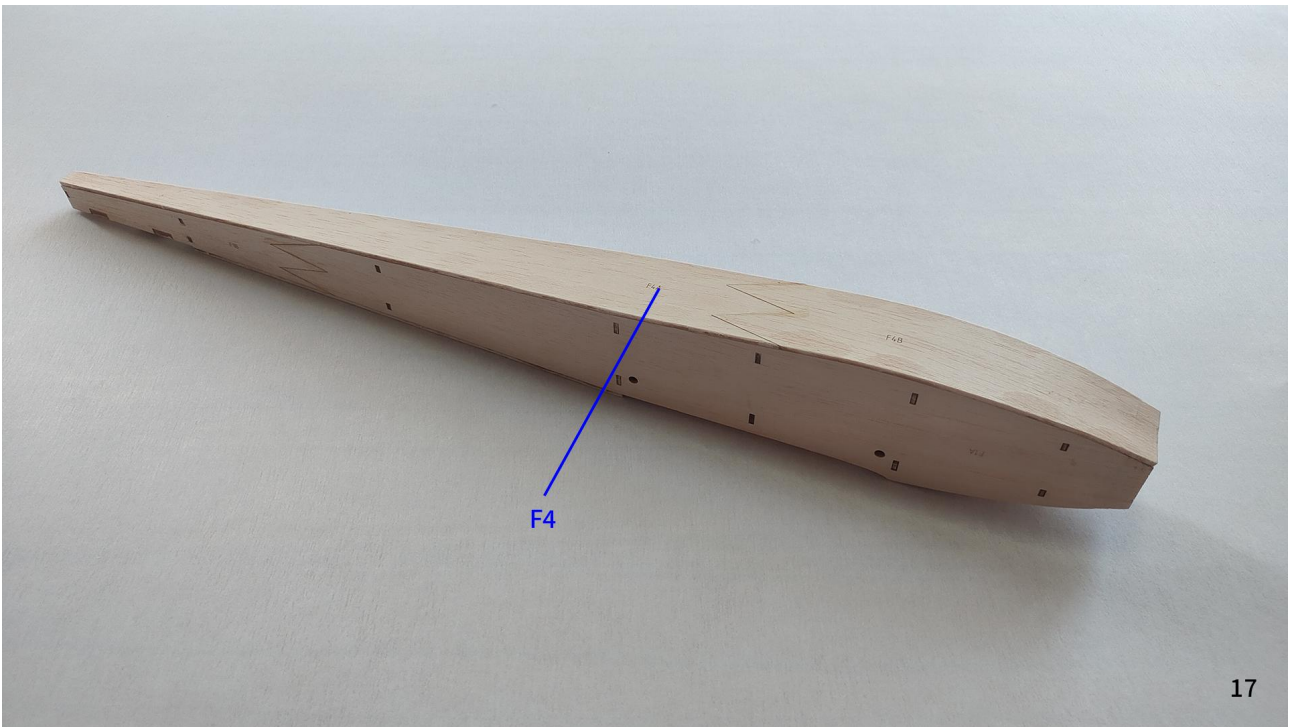


Step 17

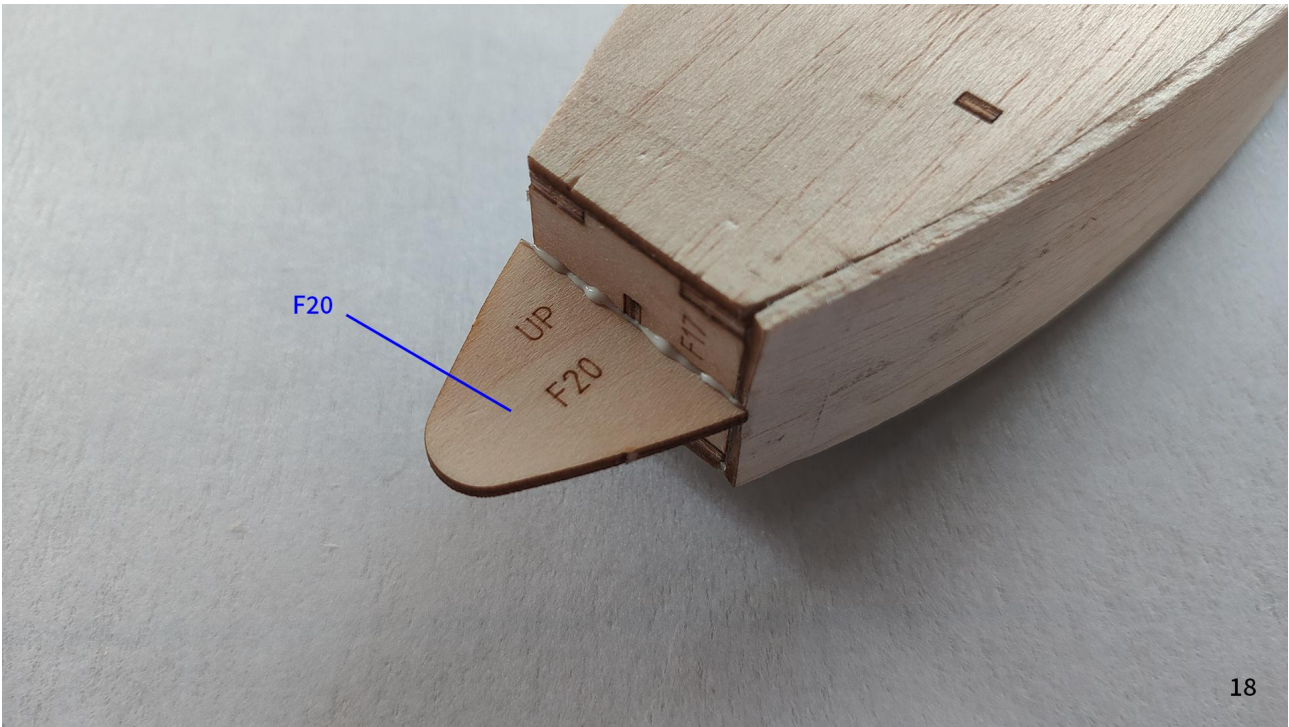

Step 18

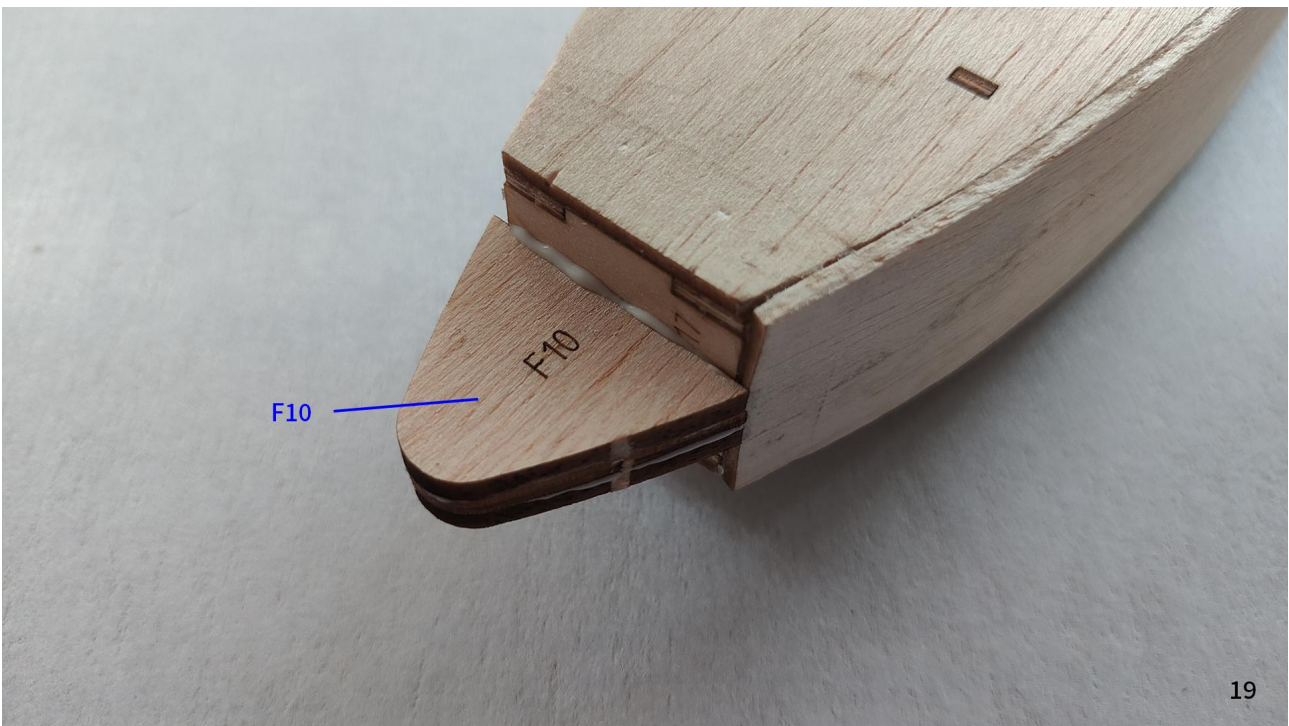


Step 19

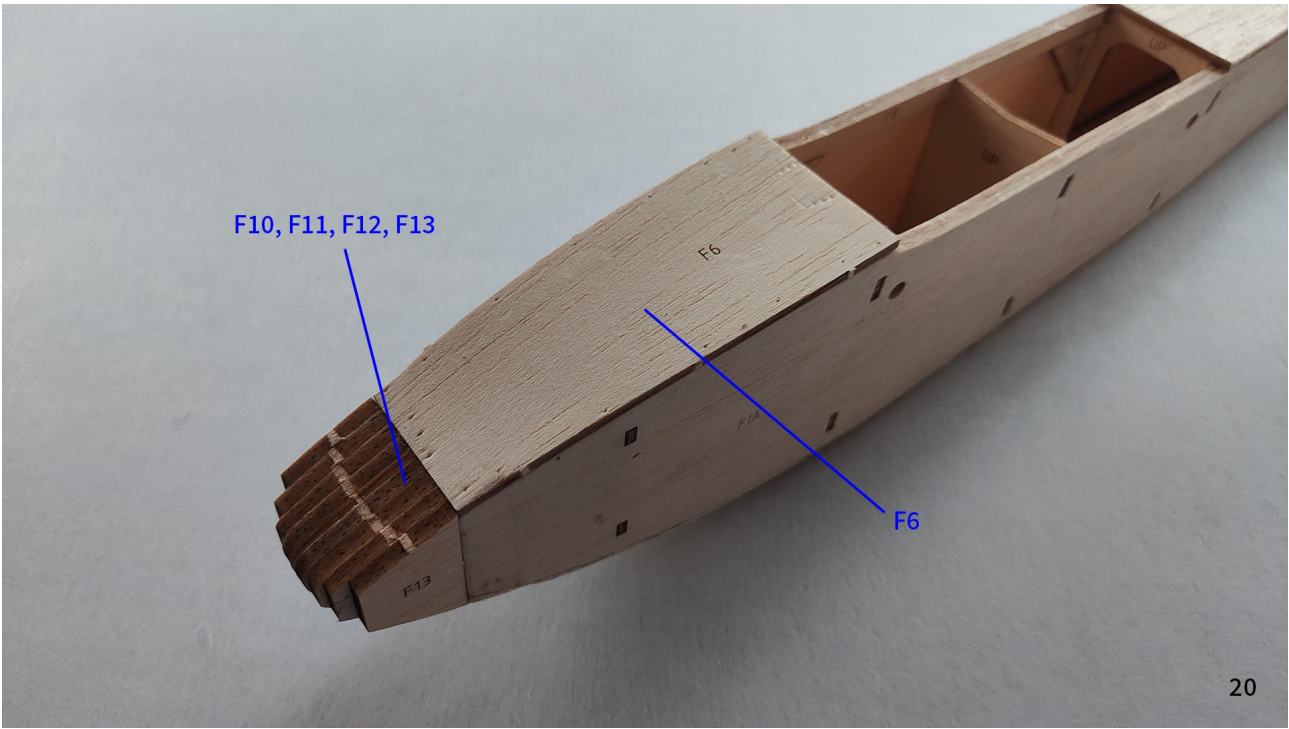


Step 20



Step 21

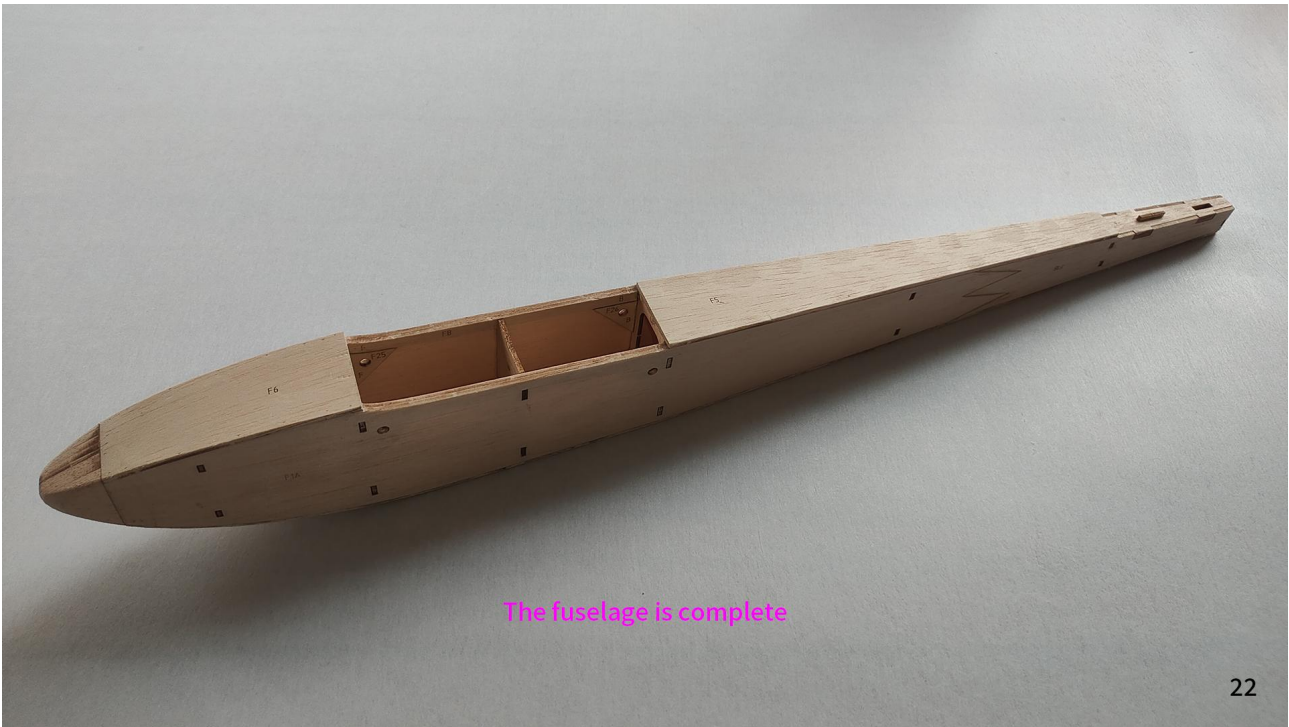


Step 22

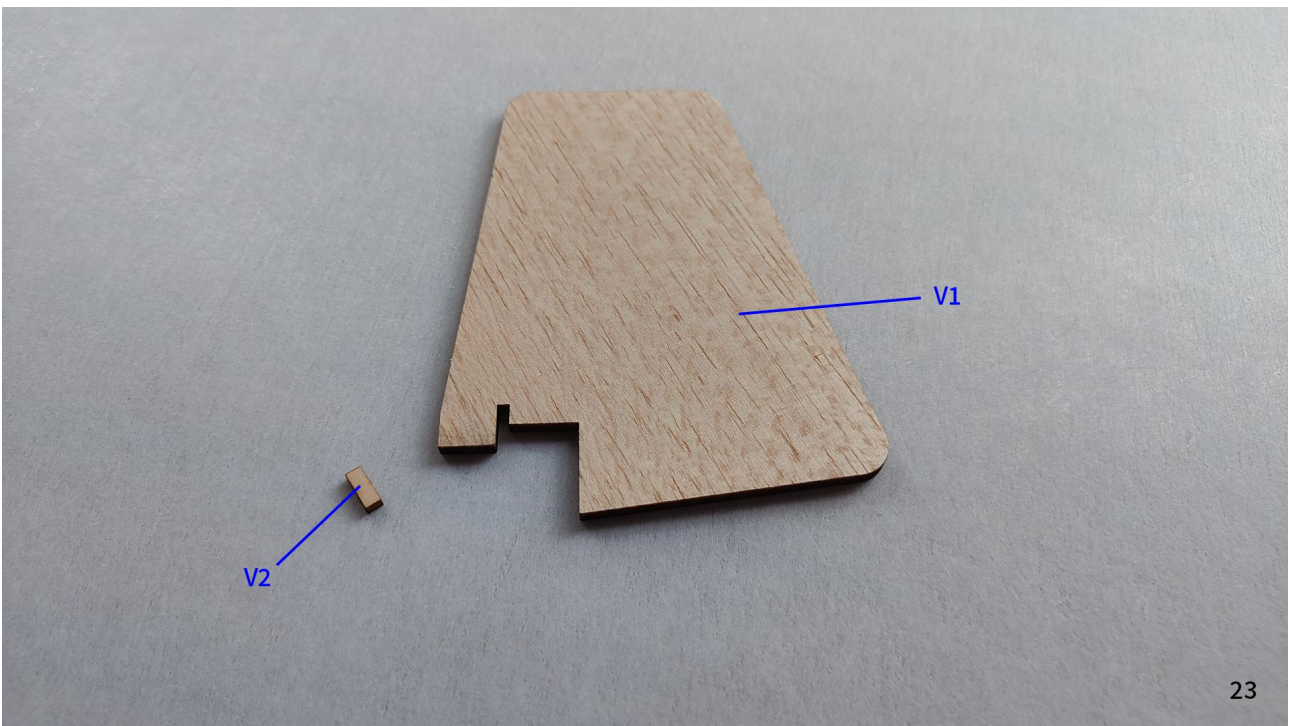


Step 23



Step 24

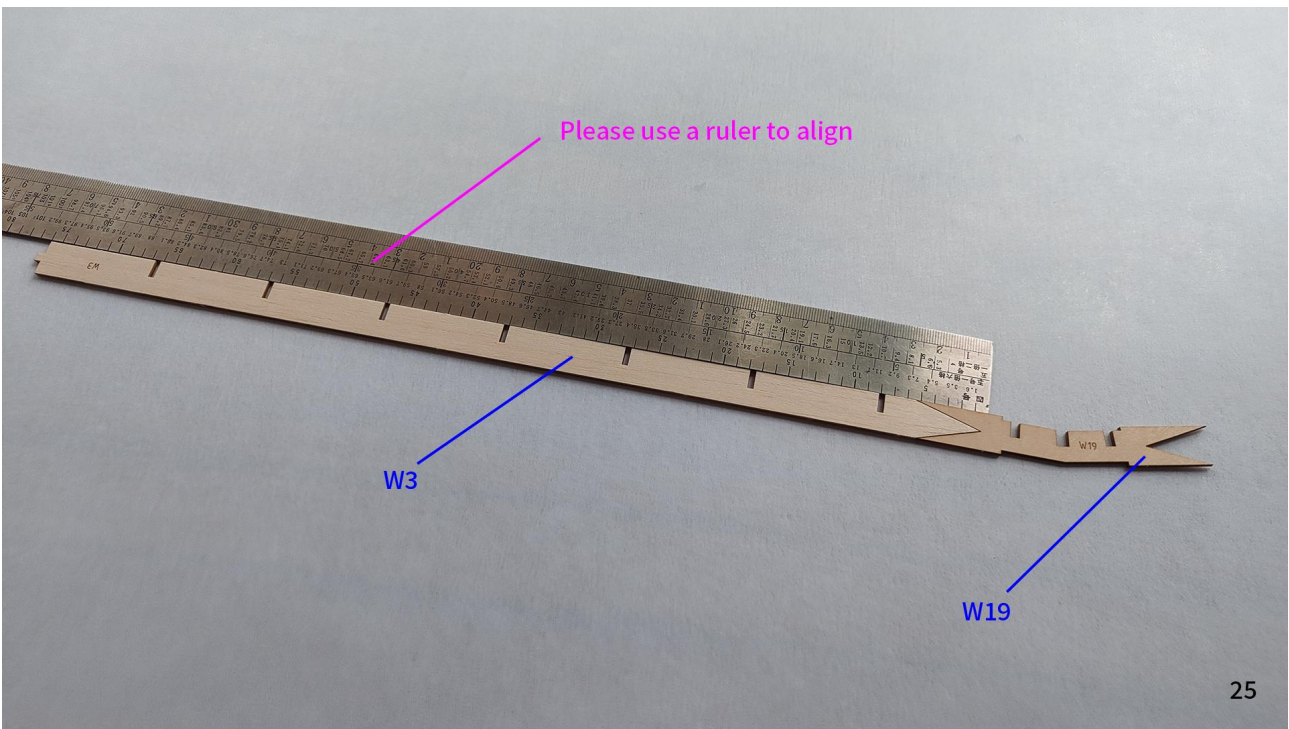


Step 25

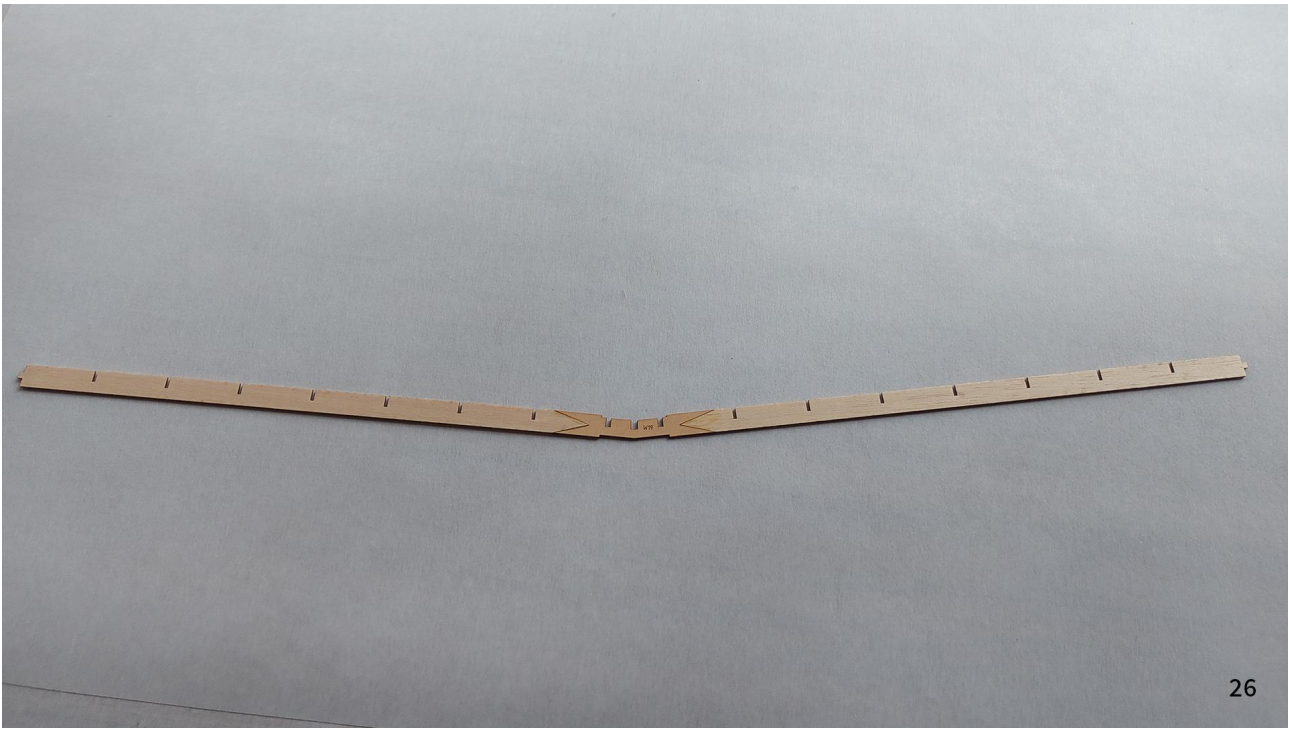


26

Step 26

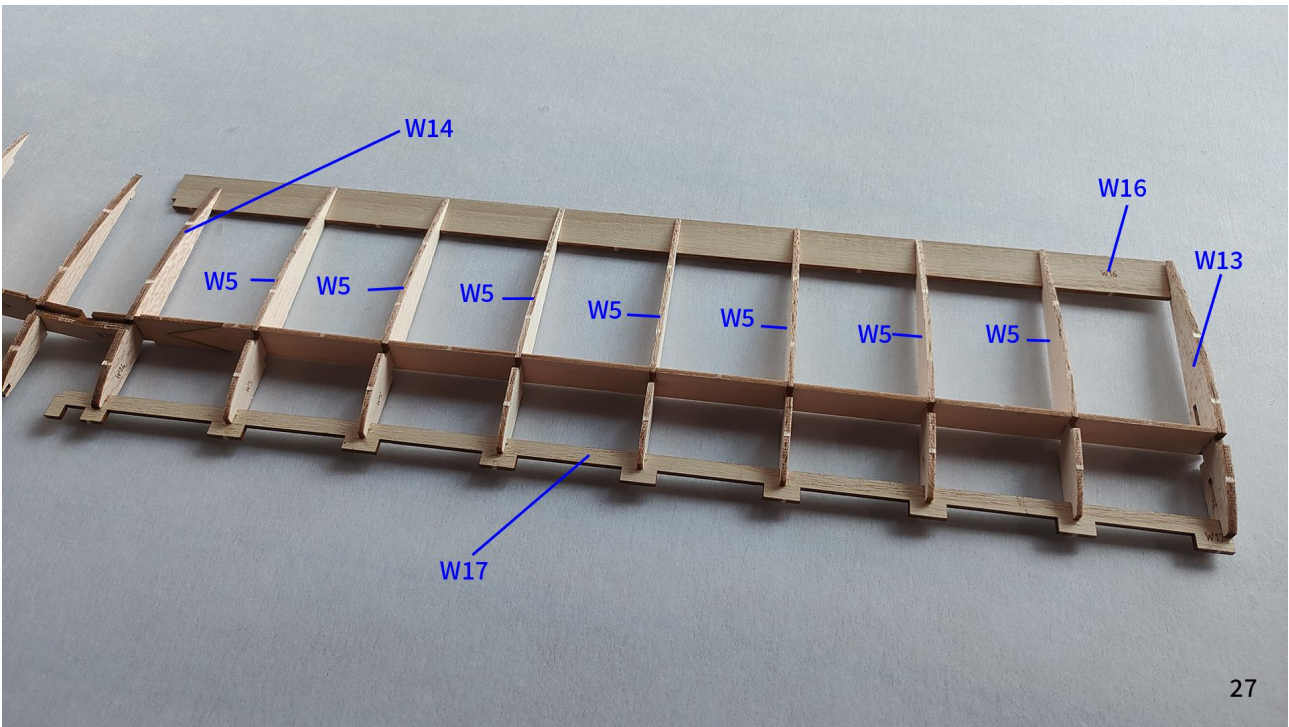


27


Step 27

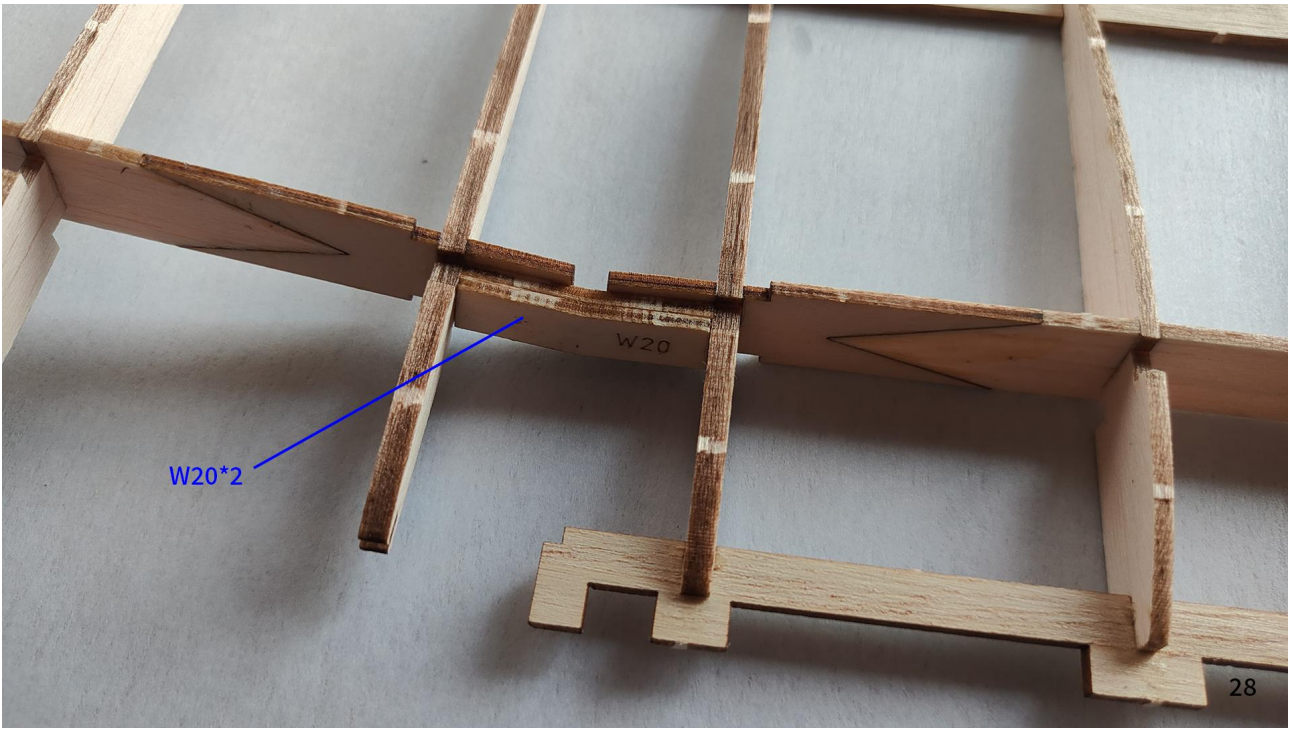


Step 28

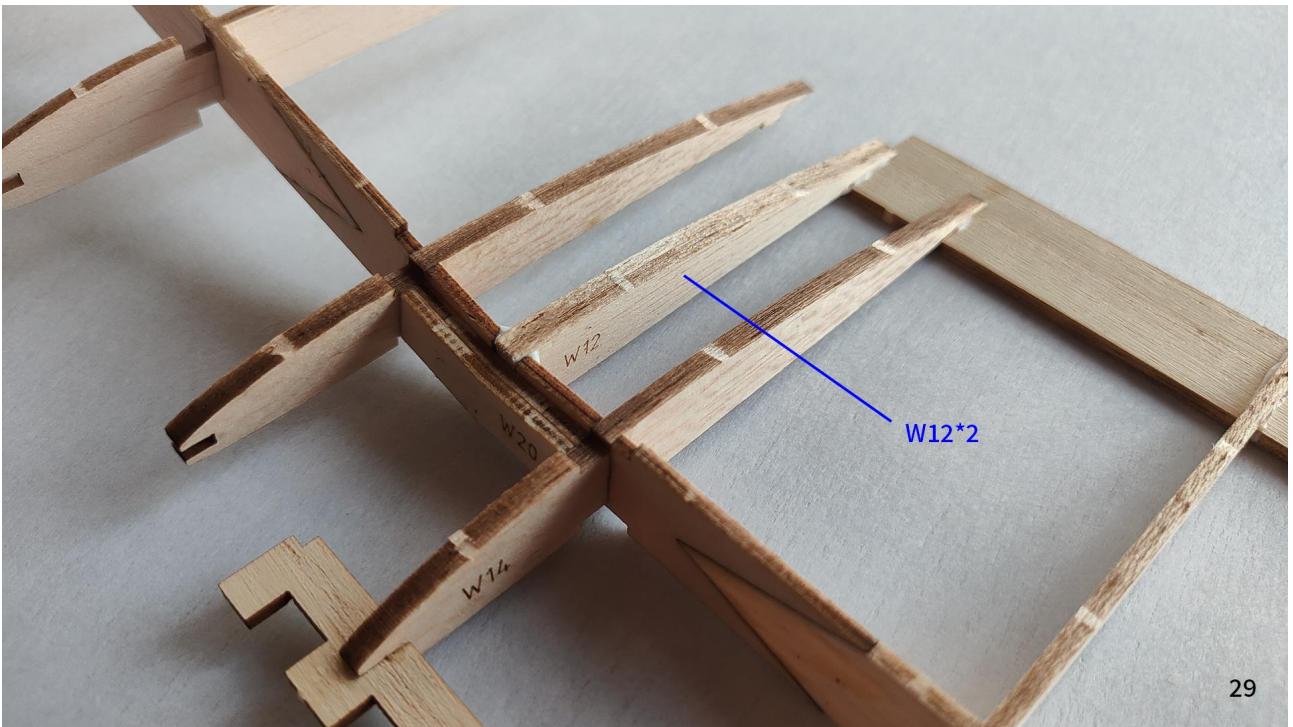


Step 29

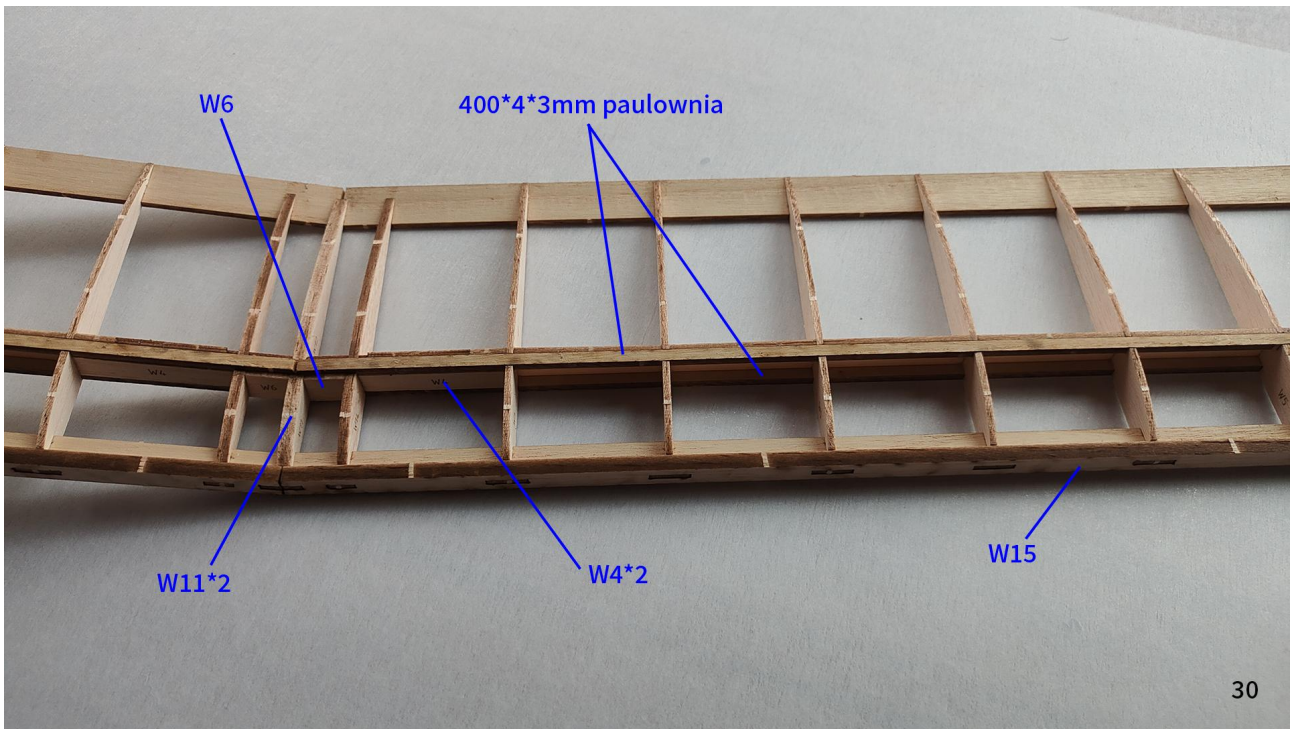


Step 30

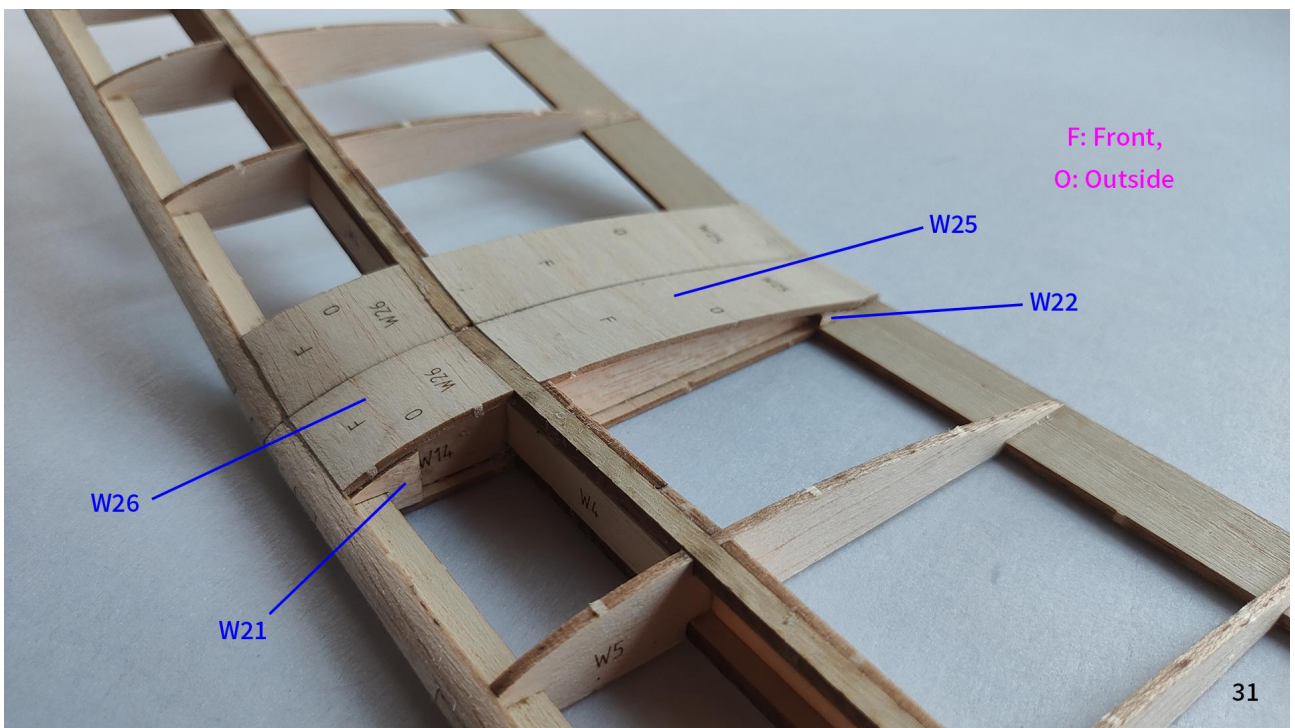


Step 31

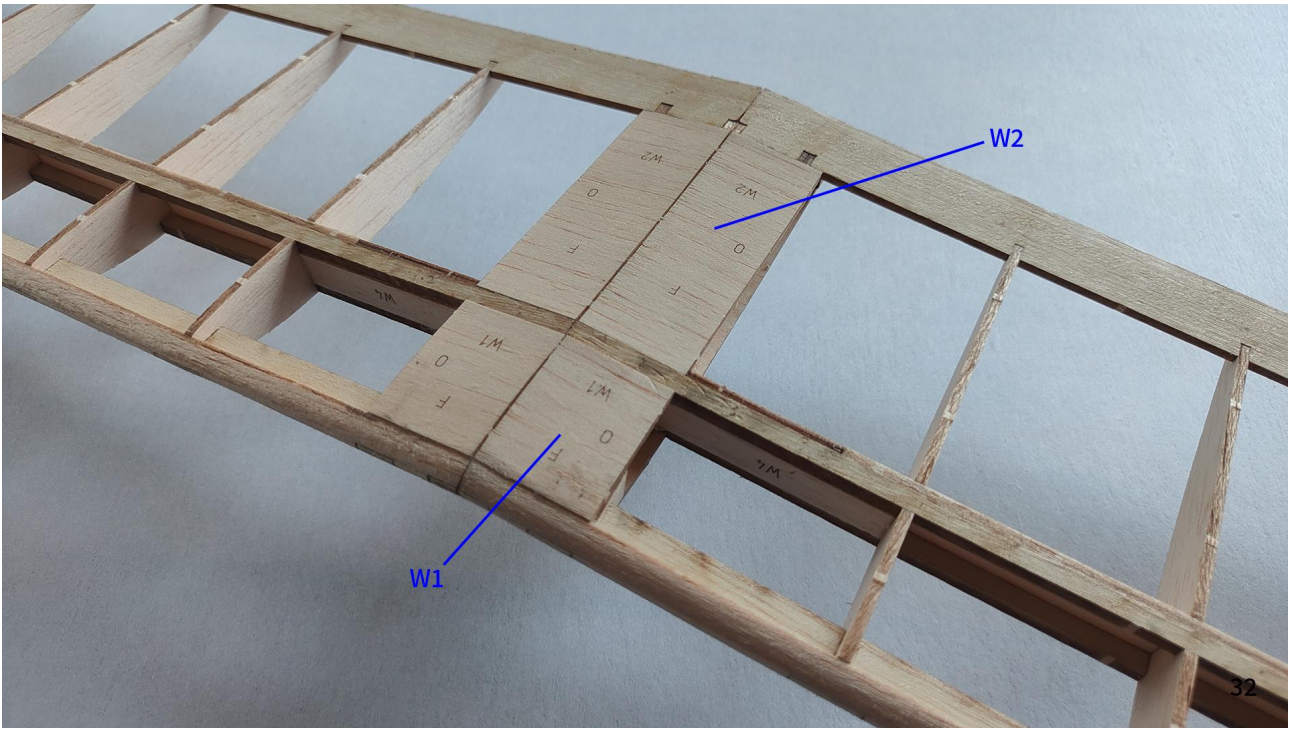


Step 32

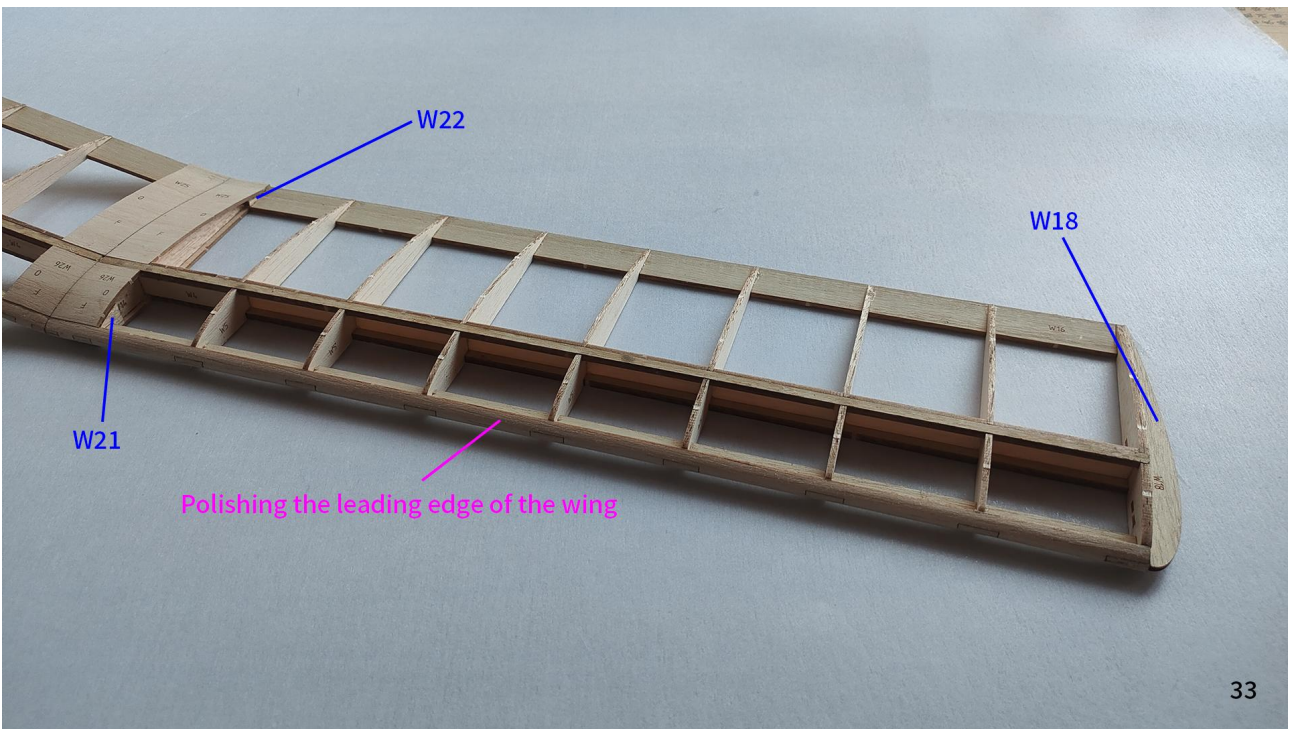


Step 33

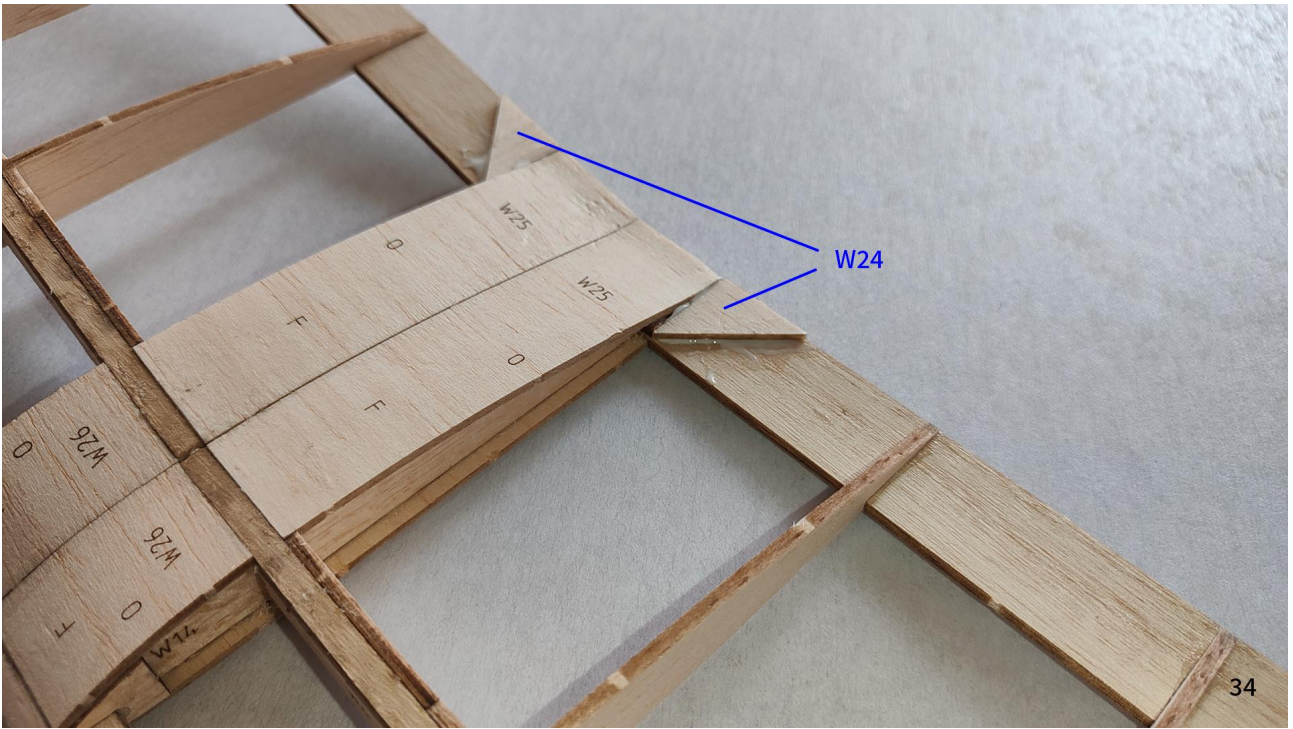


Step 34

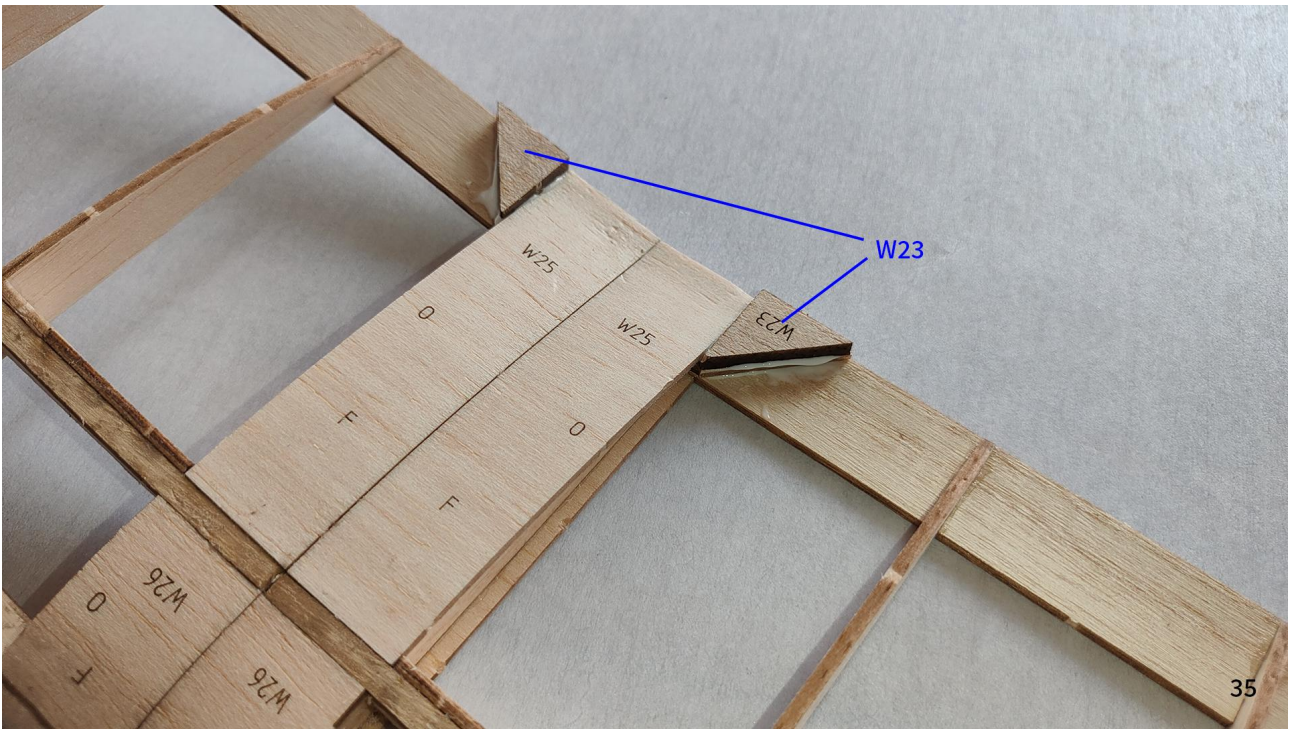


Step 35

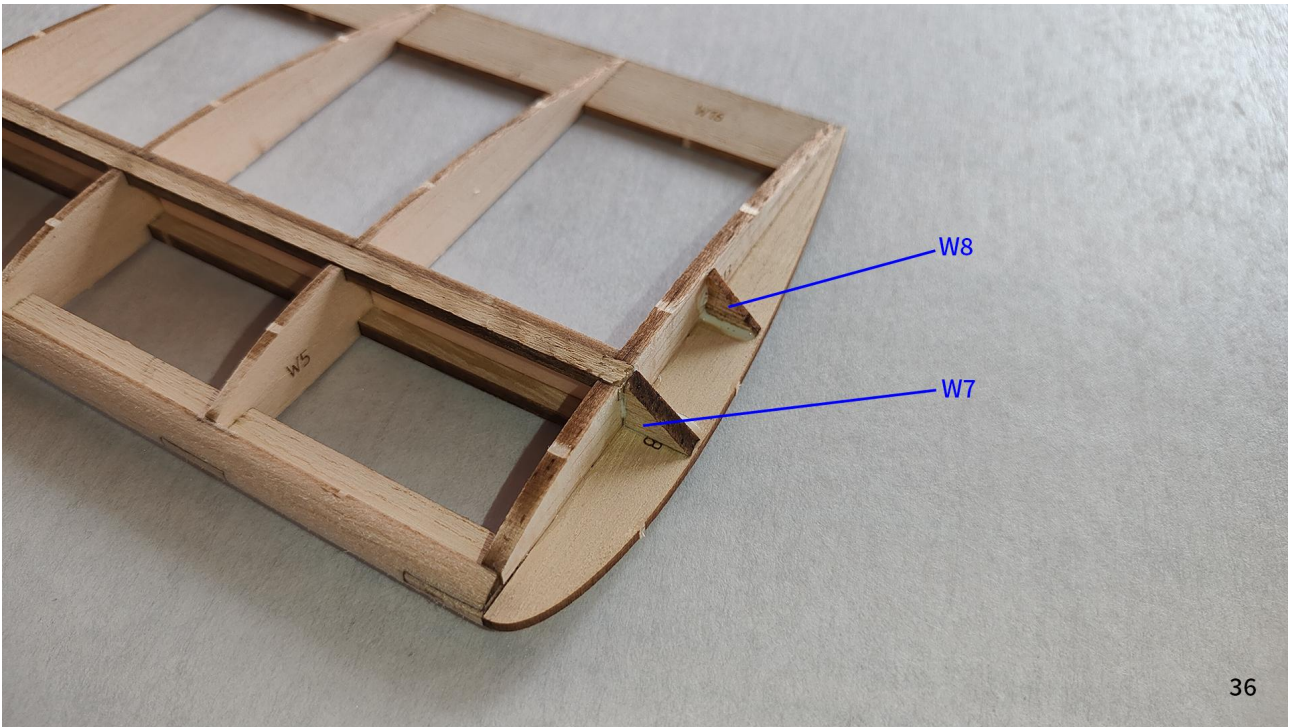


Step 36

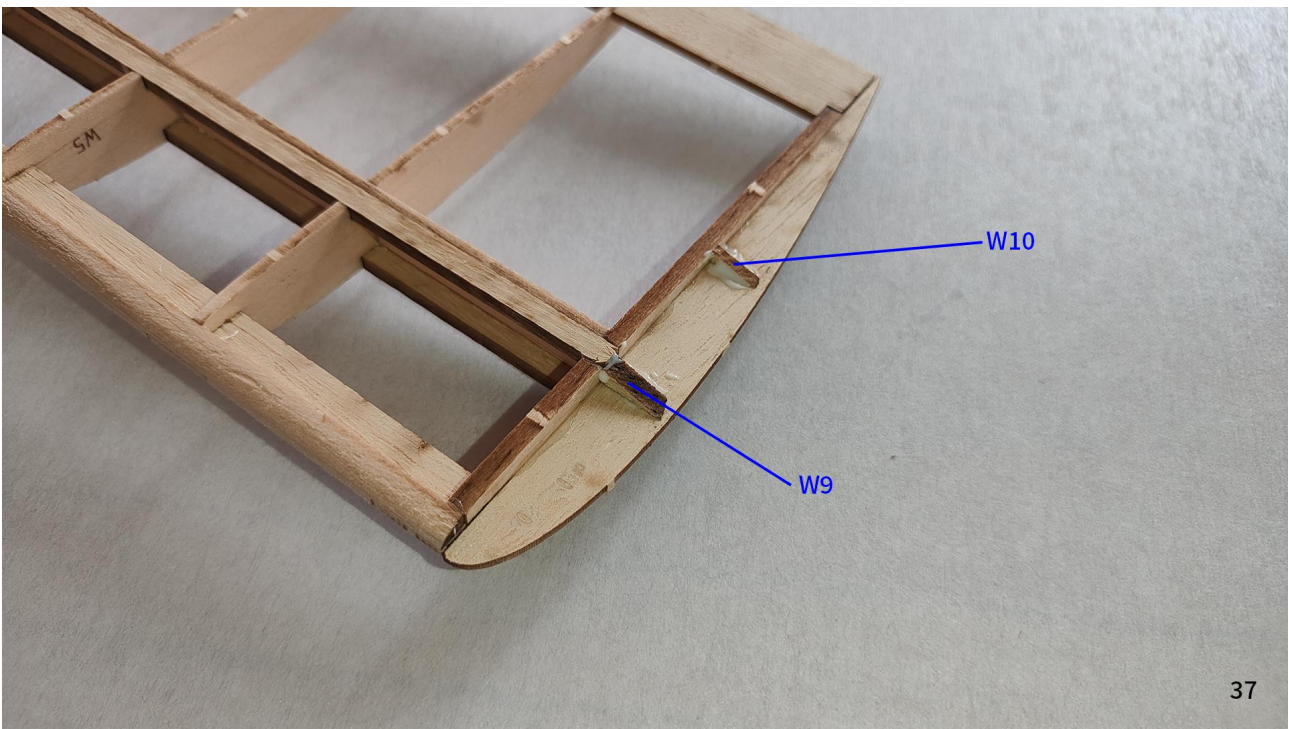


Step 37

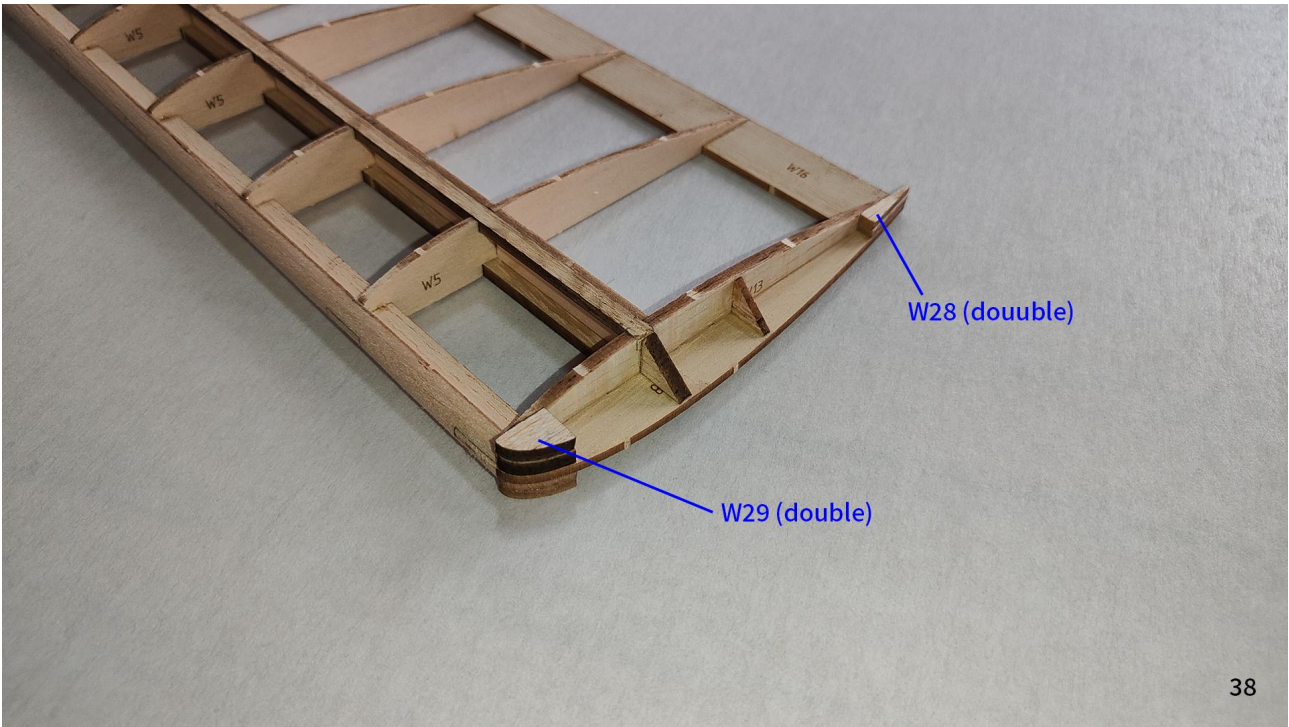


Step 38

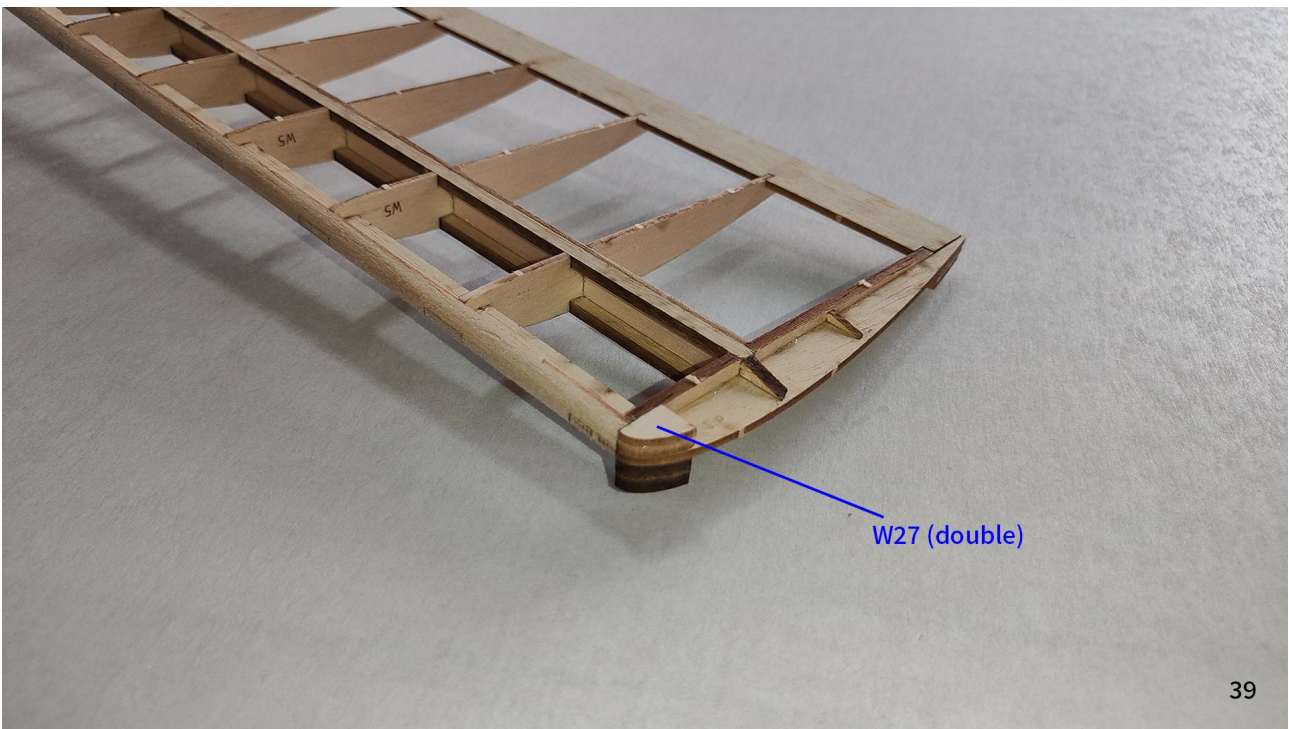


Step 39

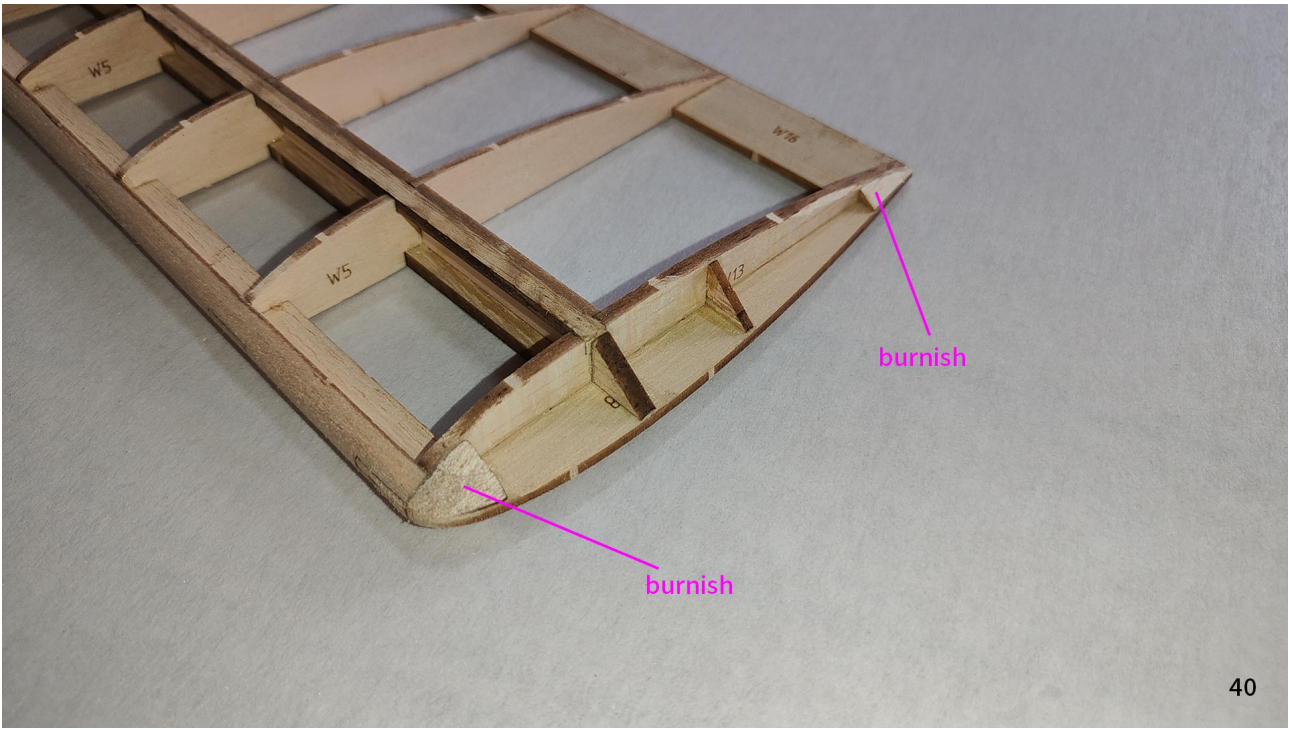

Step 40

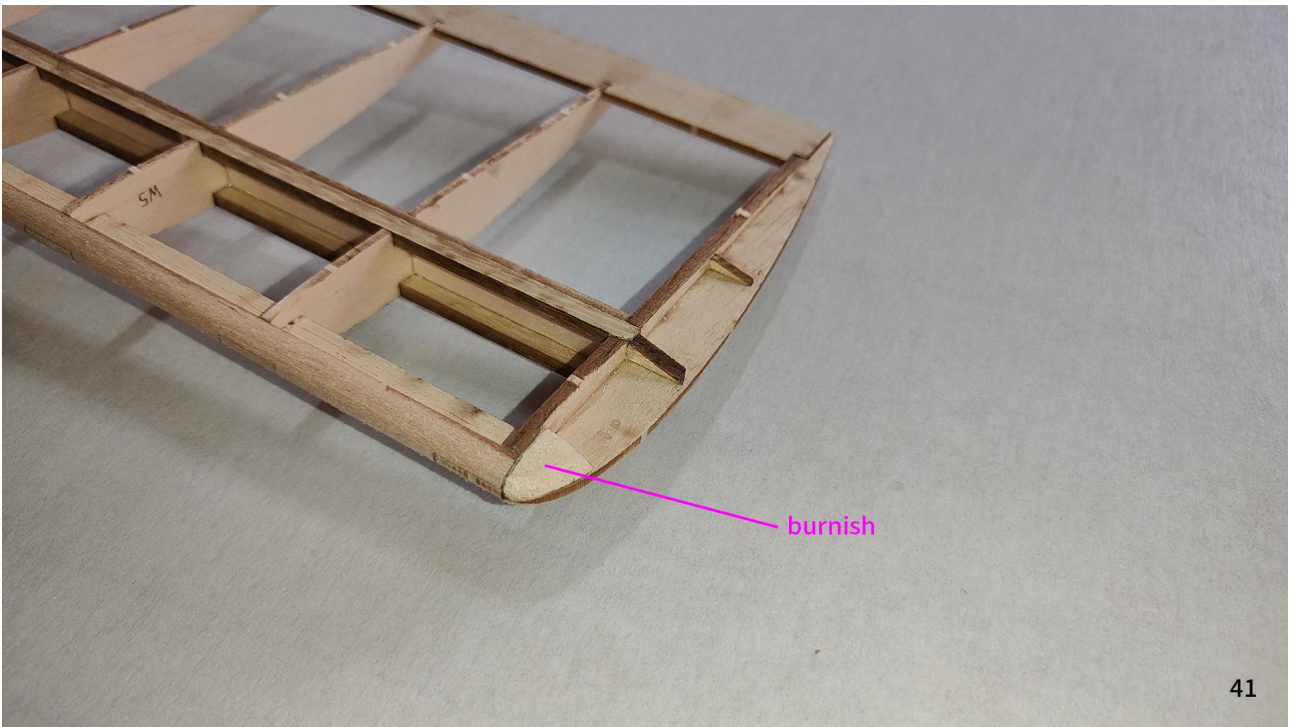


Step 41

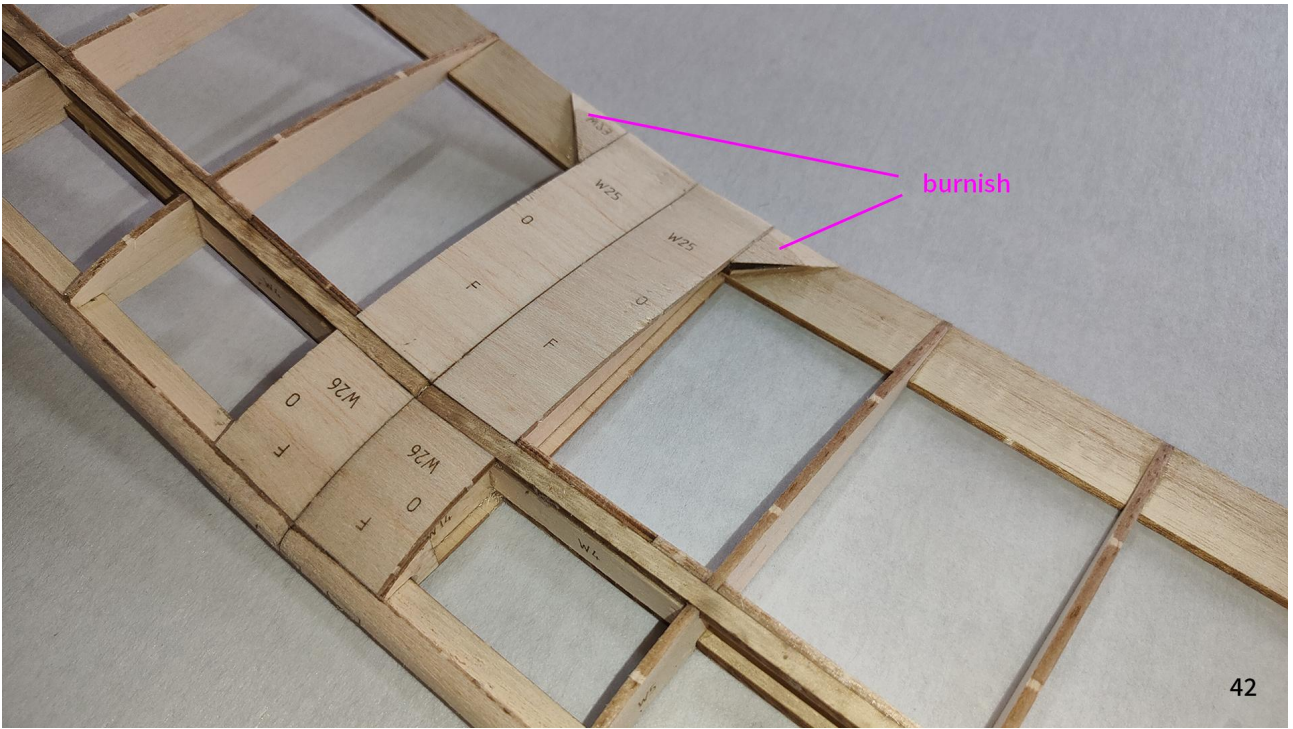

Step 42



Step 43

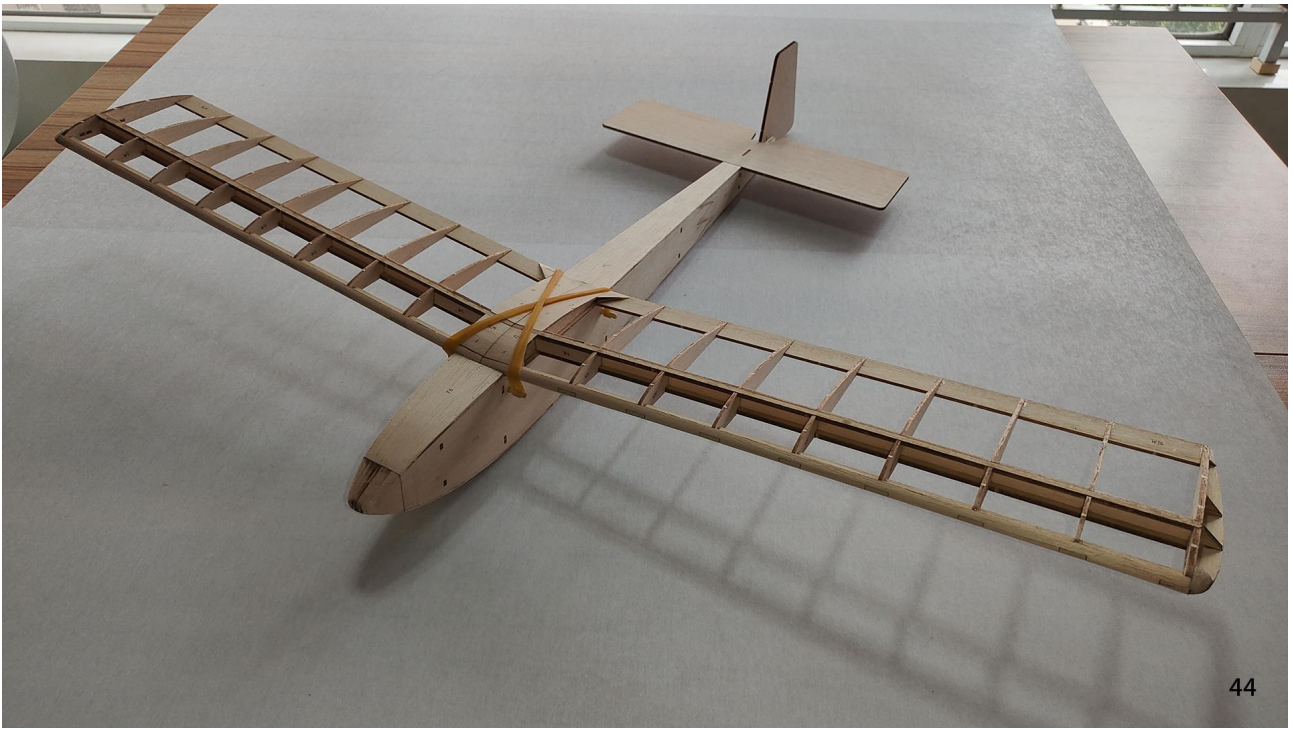

Step 44